

92

PLEASE ENTER YOUR
PIN NUMBER AND
THEN PRESS #
PRESS * TO CLEAR

FIG 15

ACTION

- USER INPUTS PIN AND
THEN #

94

PLEASE INSERT
STORED VALUE CARD
INTO READER AS
FAR AS IT WILL GO.

FIG 16

ACTION

- USER INSERTS STORED VALUE
CARD

96

SORRY, WE ARE
UNABLE TO PROCESS
YOUR TRANSACTION

FIG 17

ACTION

- MACHINE RETURNS TO FIRST
SCREEN AFTER TIME OUT.

FIG 18

10

PLEASE INPUT AMOUNT
BY PRESSING KEYS
THEN PRESS #
MAXIMUM \$100

ACTION

- USER INPUTS AMOUNT
AND #
EXAMPLE \$100 INPUT

FIG 19

108

\$100 FROM
CREDIT CARD
PRESS "YES" TO CONFIRM
"NO" TO INPUT NEW AMOUNT

ACTION

- CUSTOMER PRESSES
APPROPRIATE BUTTON
EXAMPLE "YES"

09432710 144255

180

NOW PRINTING
VOUCHER FOR YOUR
CASH

... Action

- PRINTER PRINTS VOUCHER

12

PLEASE PRESENT
VOUCHER. INSIDE
TO RECEIVE YOUR
CASH..

Action

- USER TAKES VOUCHER TO CASH REGISTER / CASH DISPENSER OR WINDOW AND RECEIVES CASH

114

REMEMBER TO TAKE
YOUR VOUCHER

Action

- USER TAKES VOUCHER

[illegible]

Fig 23

Acrid

- MACHINE DISPENSES CASH

Fig. 2.4

אברהם

- VISA TAXES CASH

[illegible]

09439718-11299

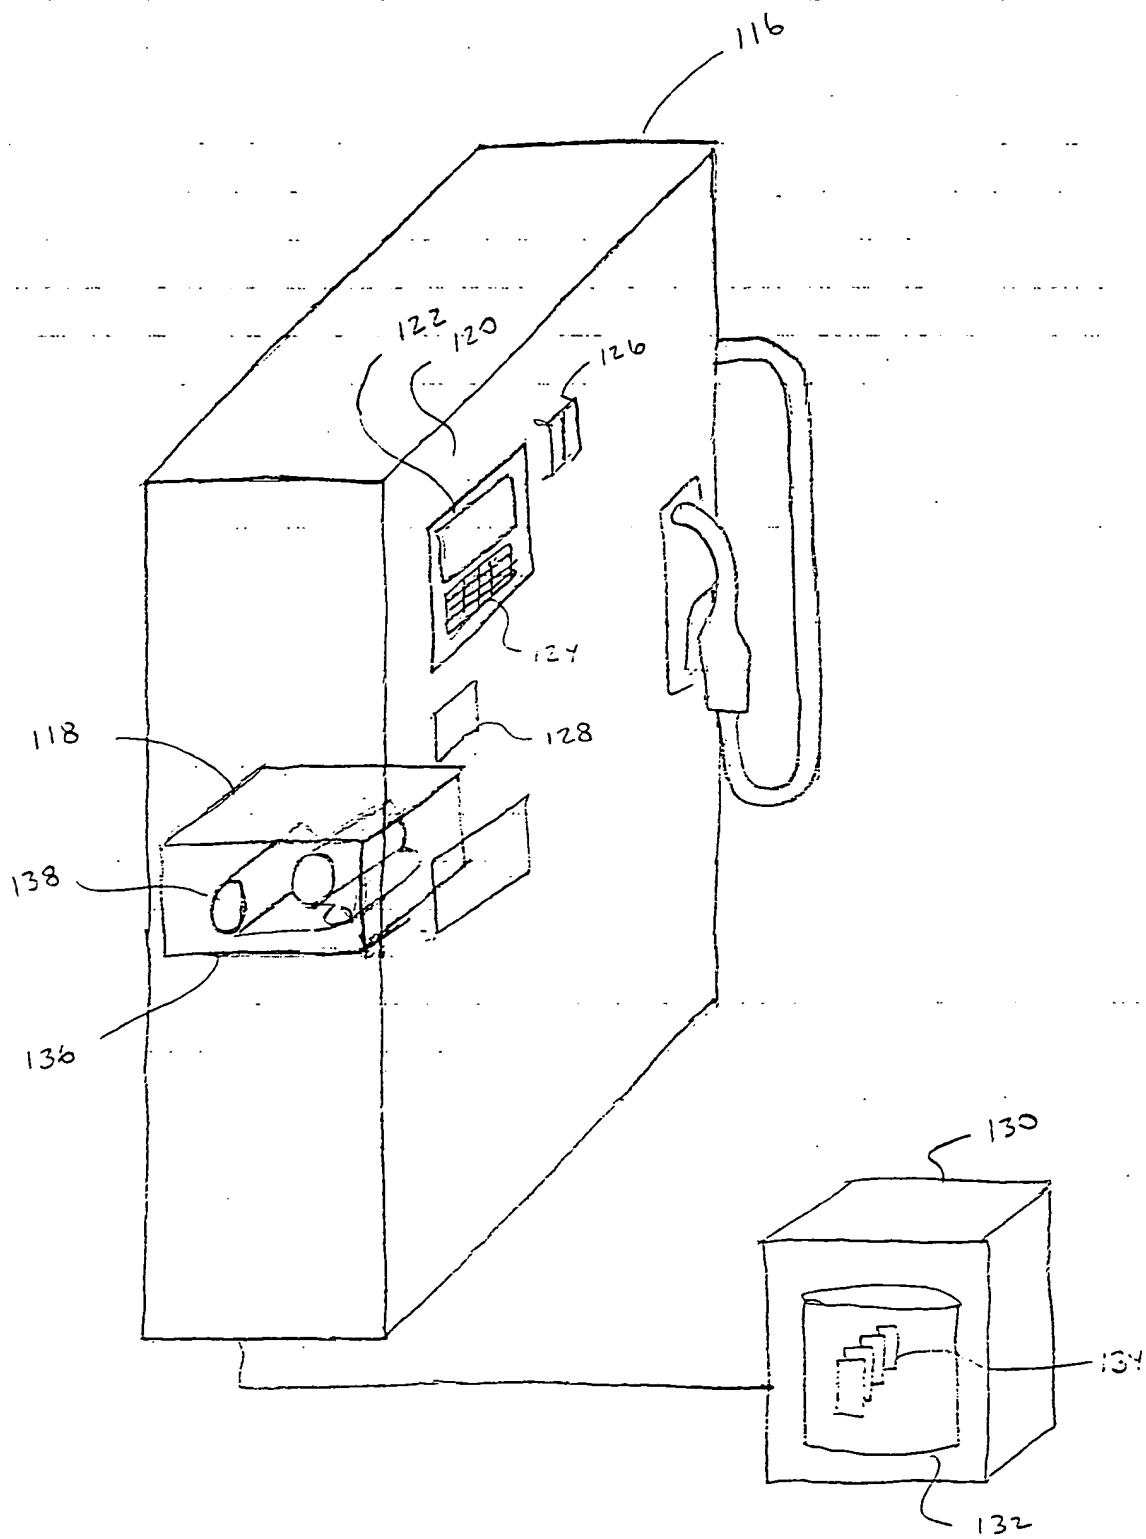 


FIG 25

192

FIG 26

PAY BY

1 CARD

2 CASH

ACTION

- USER SELECTS CASH OR CARD
- EXAMPLE CASH

194

FIG 27

INSERT BILLS INTO
BILL ACCEPTOR BELOW

PRESS "1" TO RETURN TO
FIRST SCREEN

ACTION

- USER INSERTS NOTES INTO
NOTE ACCEPTOR OR RETURNS
TO BEGINNING
- EXAMPLE - NOTE INPUT

196

FIG 28

AVAILABLE CREDIT

\$ 20.00

PRESS "1" TO RETURN TO
FIRST SCREEN

PRESS "2" TO BEGIN PUMPING

ACTION

- USER INSERTS MORE NOTES
OR PASSES OTHER OPTIONS
- EXAMPLE - USER PASSES "2."

198

FIG 29

REMOVE NOZZEL
AND PUMP GAS

ACTION

- USER REMOVES NOZZEL AND
PUMPS
- PUMP STOPS WHEN AVAILABLE
CREDIT IS REACHED OR
CUSTOMER SHUT OFF

05430710-11000

200

Fig 30

YOUR AVAILABLE
CREDIT IS GREATER
THAN YOUR CHARGE
A CASH VOUCHER FOR
THE DIFFERENCE IS
PRINTING

Action

- MACHINE PRINTS VOUCHER
FOR DIFFERENCE

202

Fig 31

PLEASE PRESENT
VOUCHER INSIDE
TO RECEIVE YOUR
CASH

09435710 112500

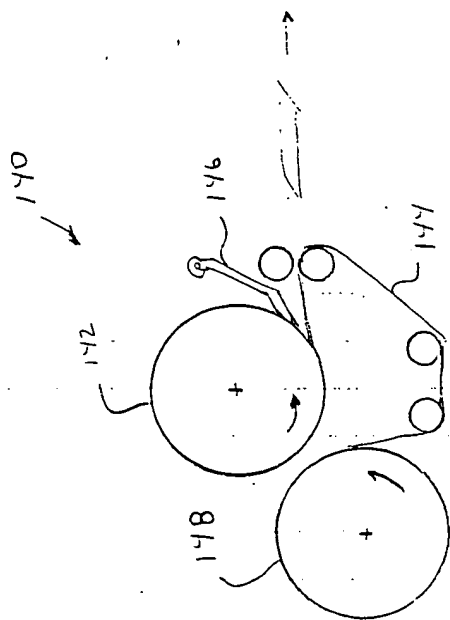 


Fig 32

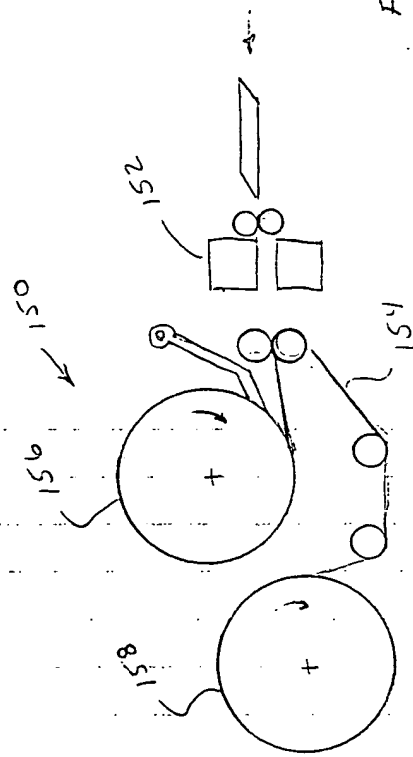 


Fig 33

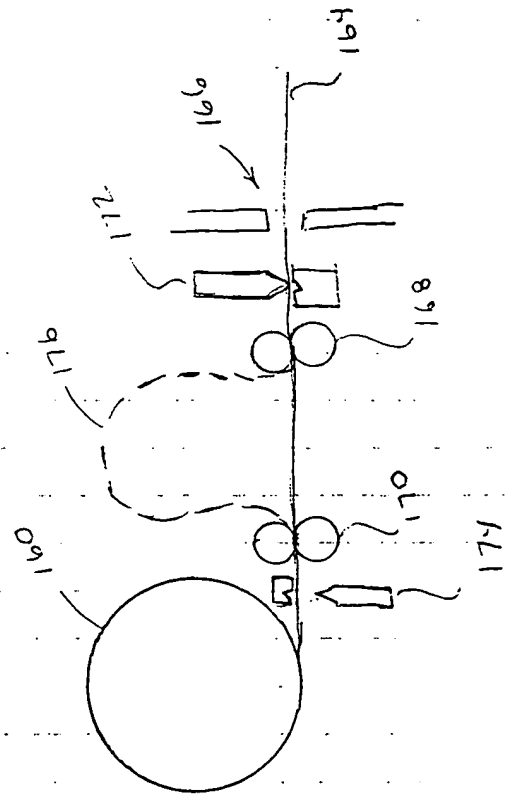 
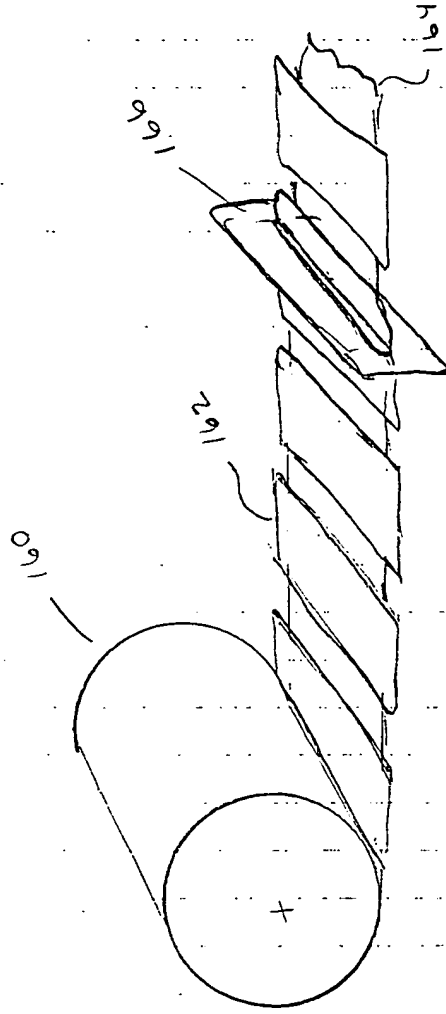 


Fig 36

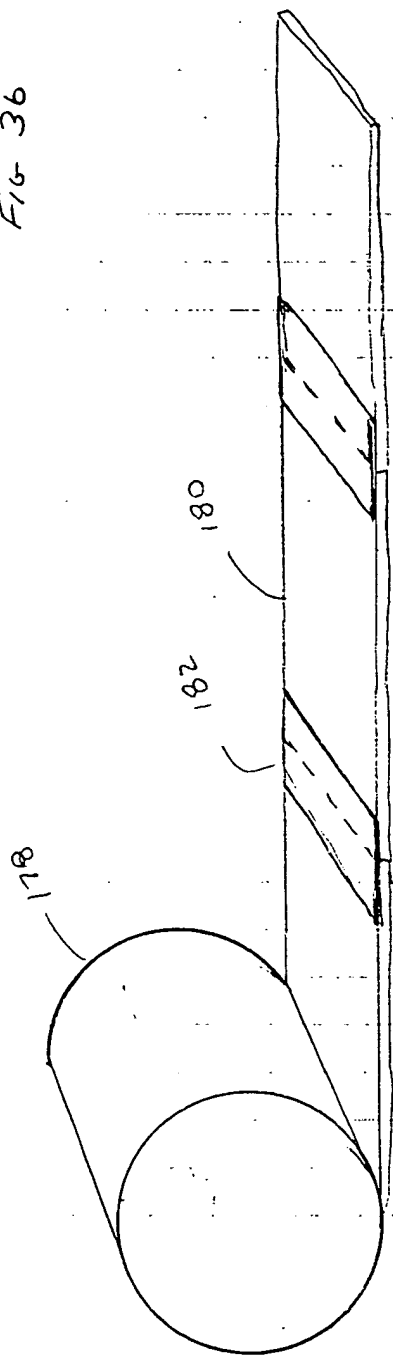
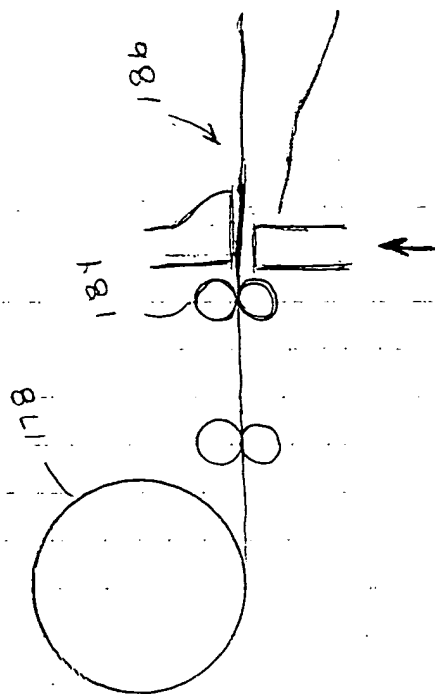 


Fig 37

 


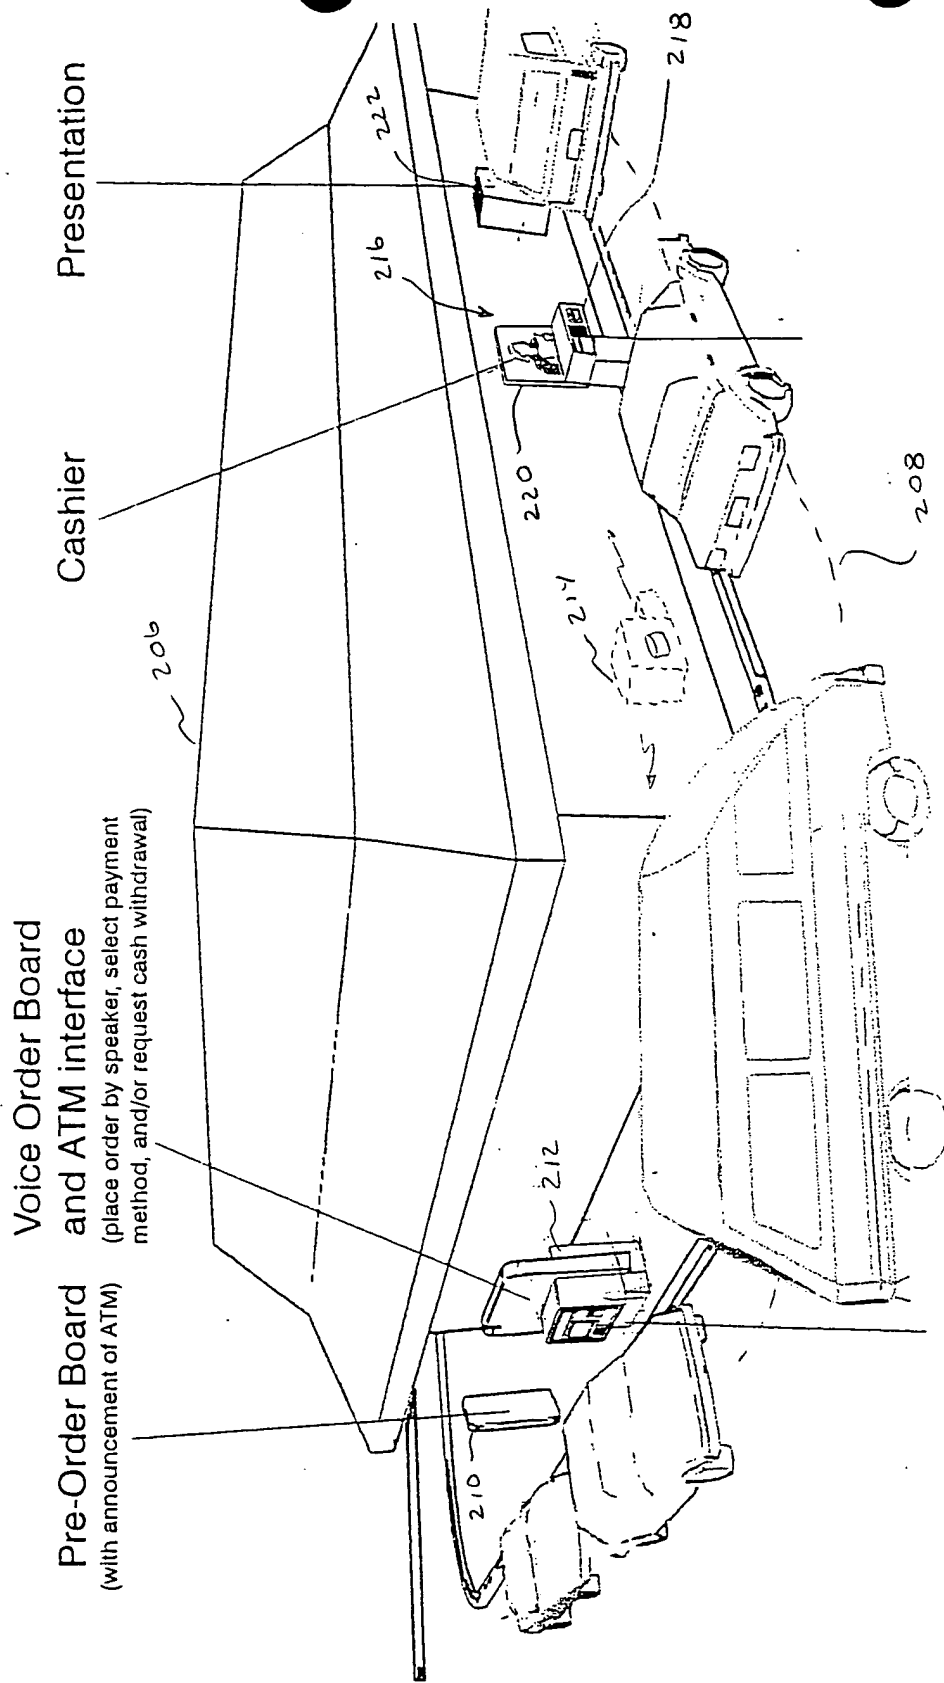 


Fig 38

204


212

 FIG 39

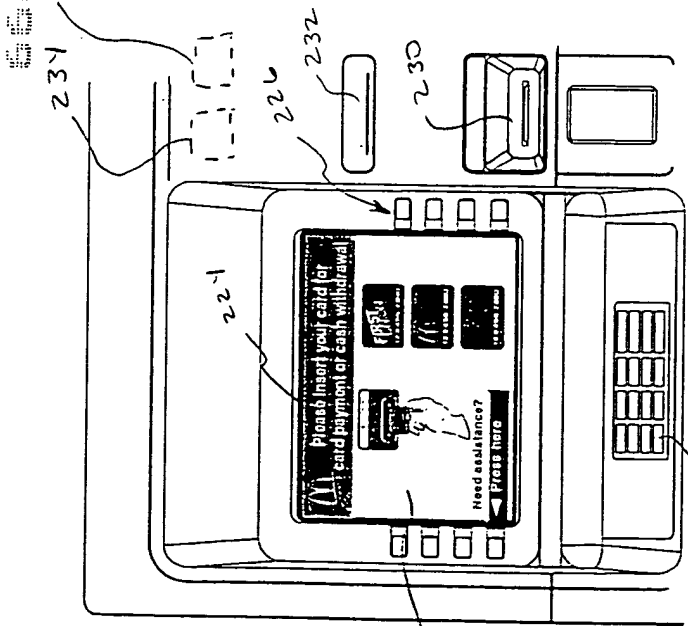


1 - Insert card

 
228

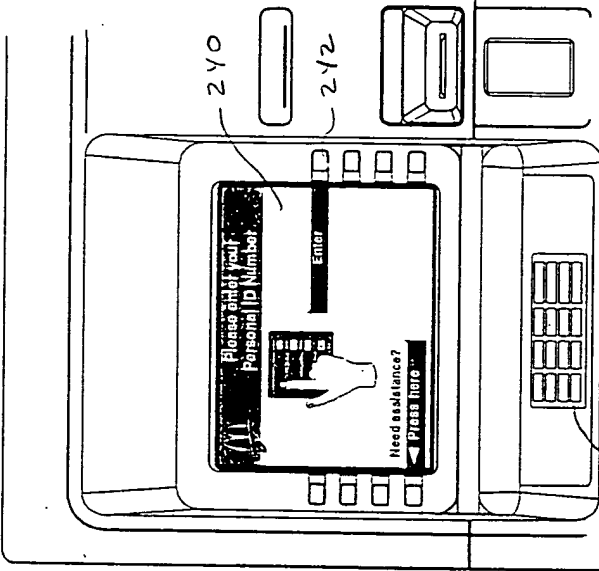


228 2 - Enter PIN

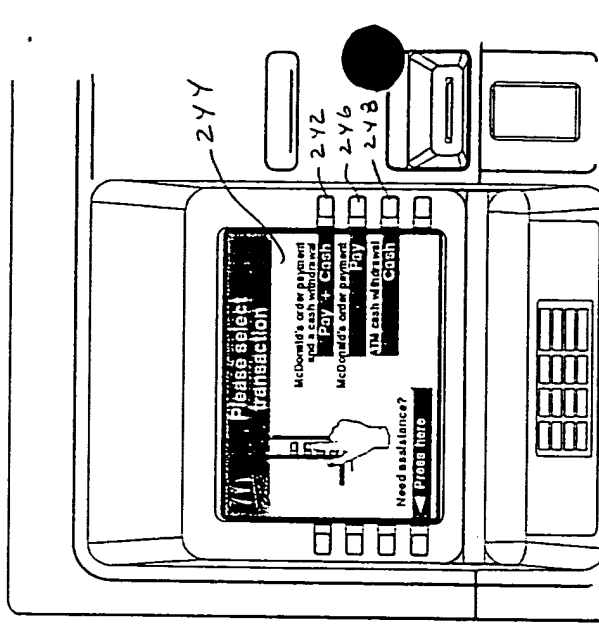 


3 - Select transaction

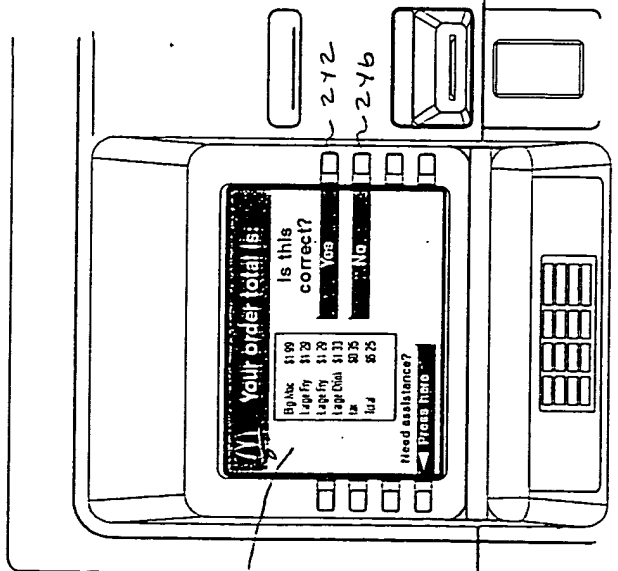 


4 - Order total

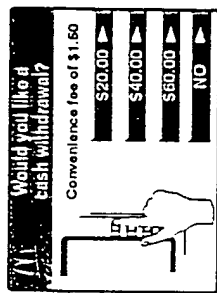 

 5a - Cash withdrawal (financial customer)

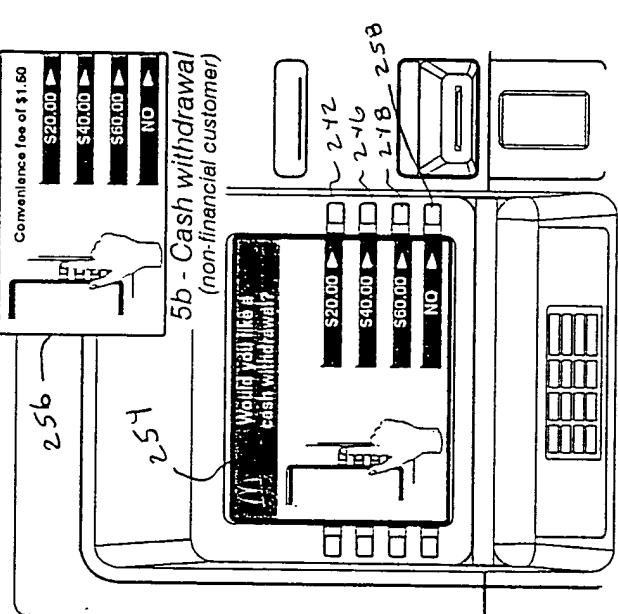

 5a - Cash withdrawal (financial customer)

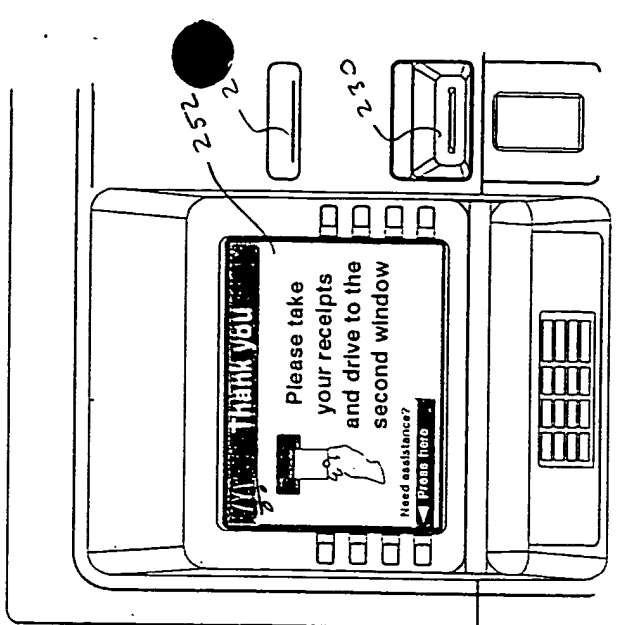

6 - Thank You

09439718-11209



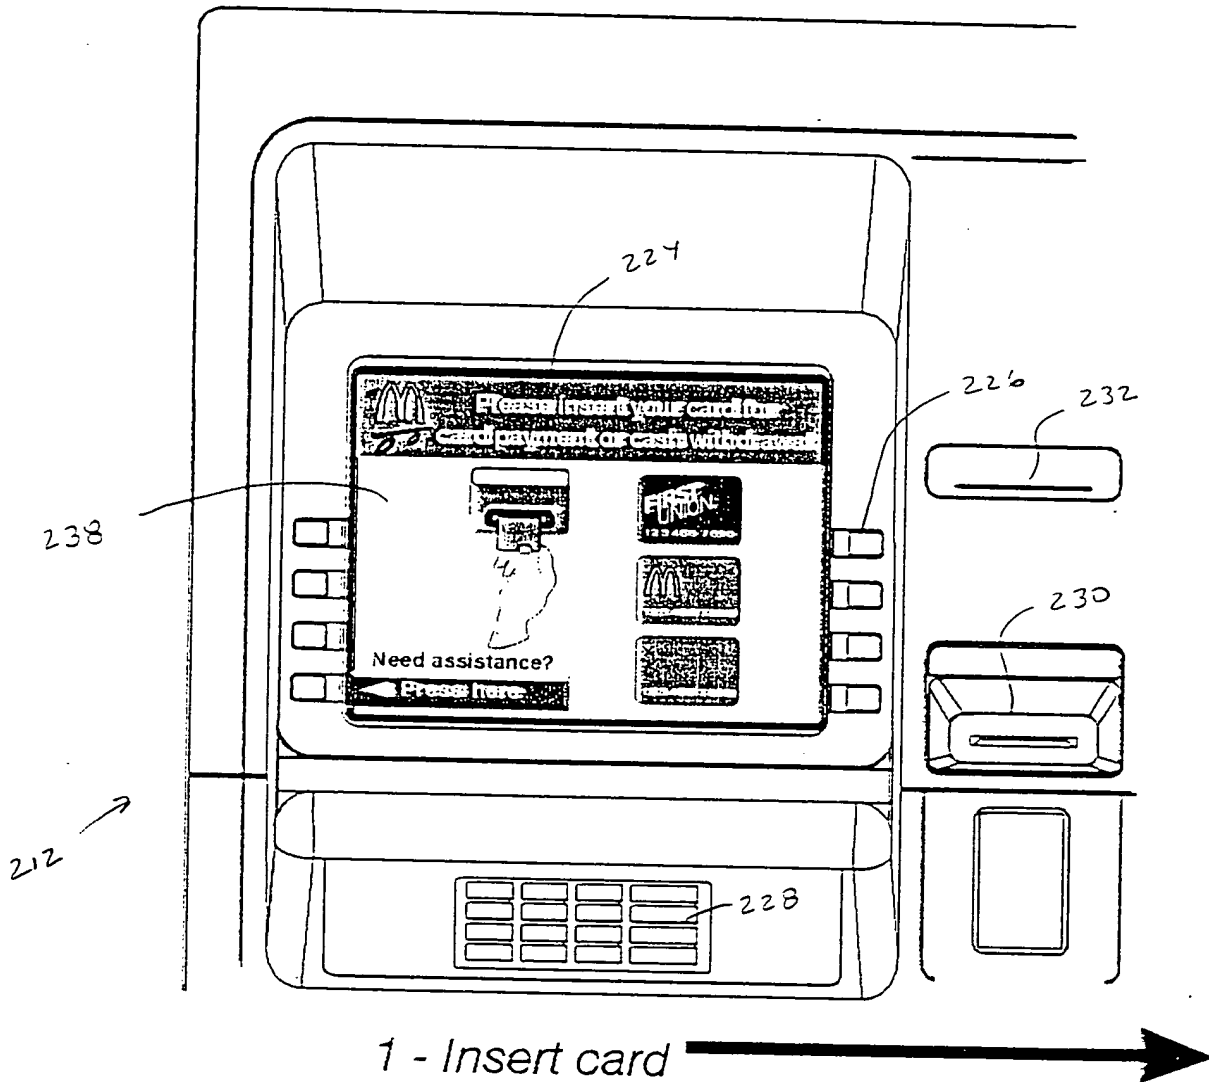 


FIG 40

 094339718-111209

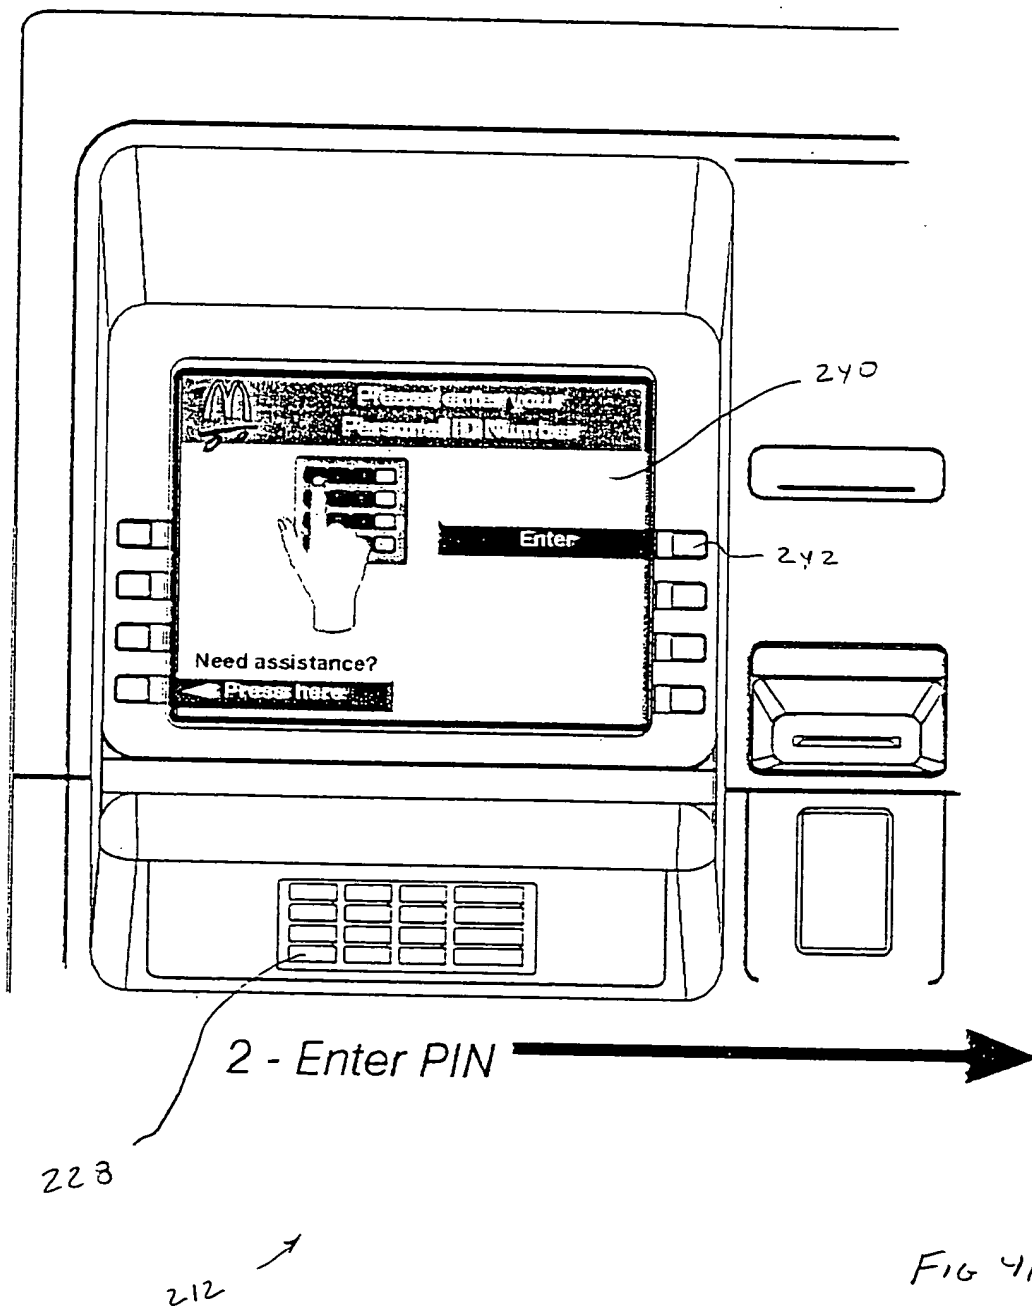

09430718-11359

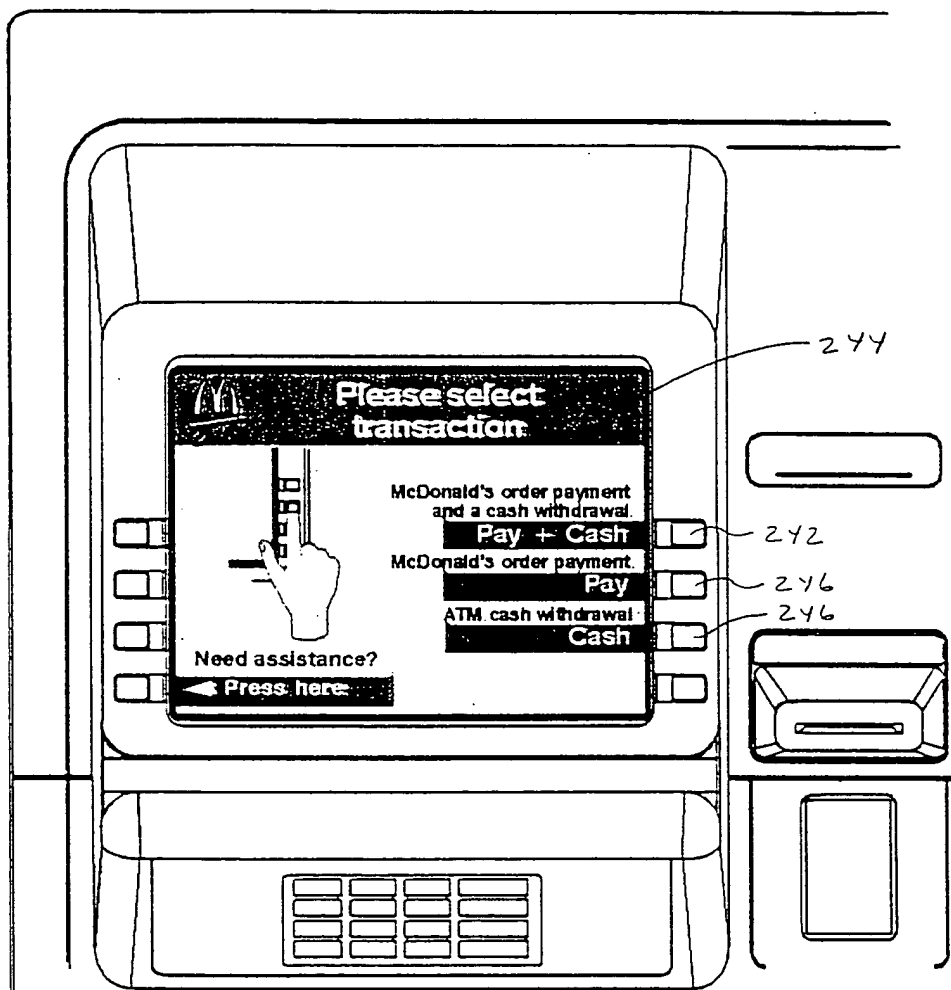 

3 - Select transaction

212

FIG 42

McDonald's logo

Your order total is:

Big Mac	\$1.99
Large Fry	\$1.29
Large Fry	\$1.29
Large Drink	\$1.33
tax	\$0.35
Total	\$6.25

Is this correct?

Yes

No

Need assistance?
Press here

250

242

246

FIG 43

09439748-11399


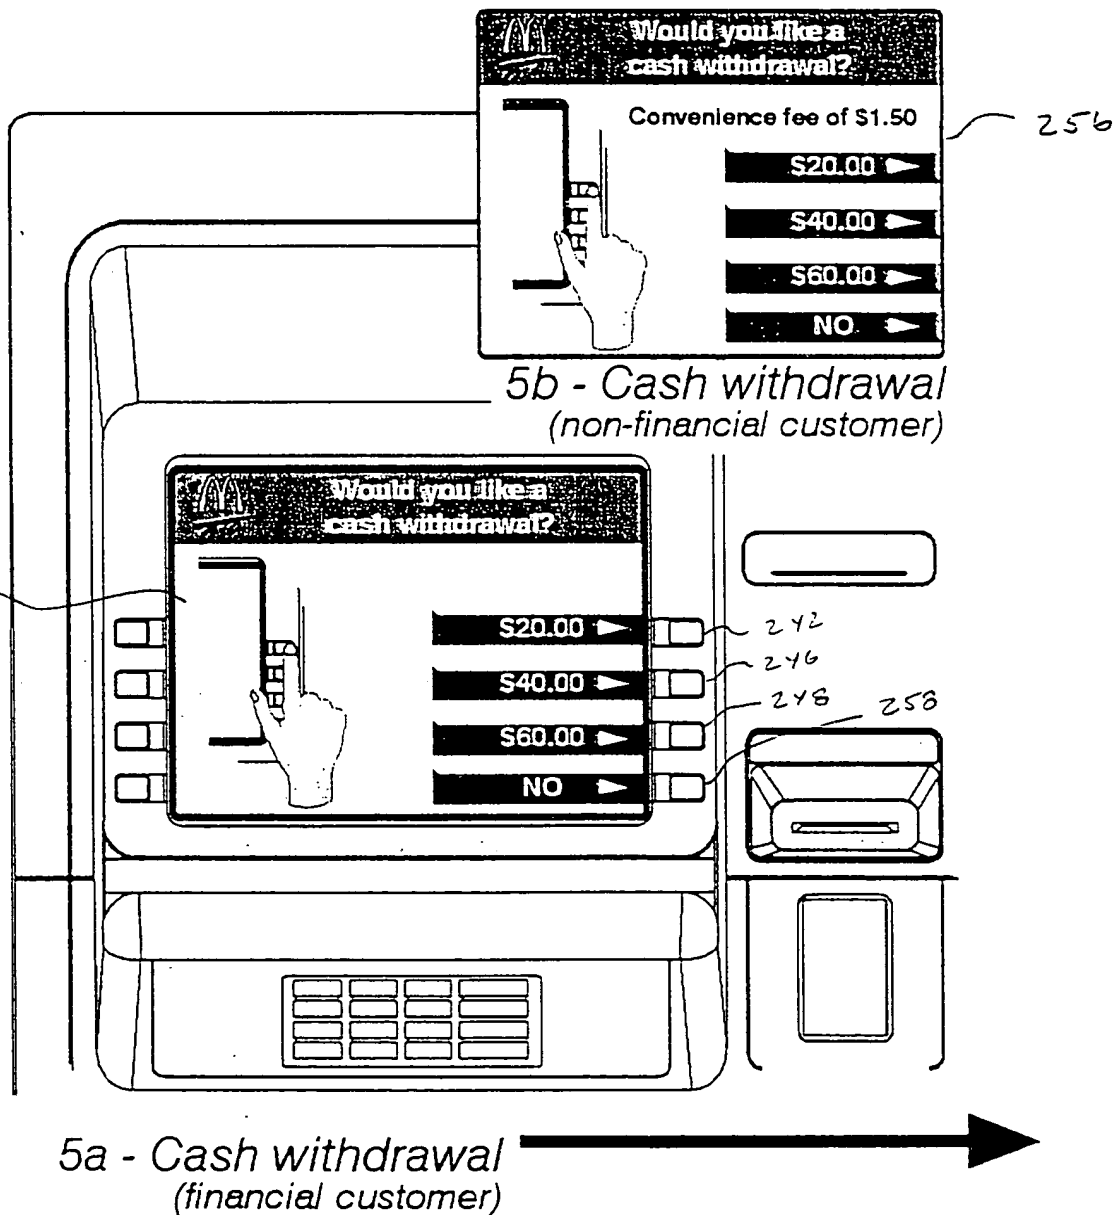 


FIG 44

 
0043918-11290

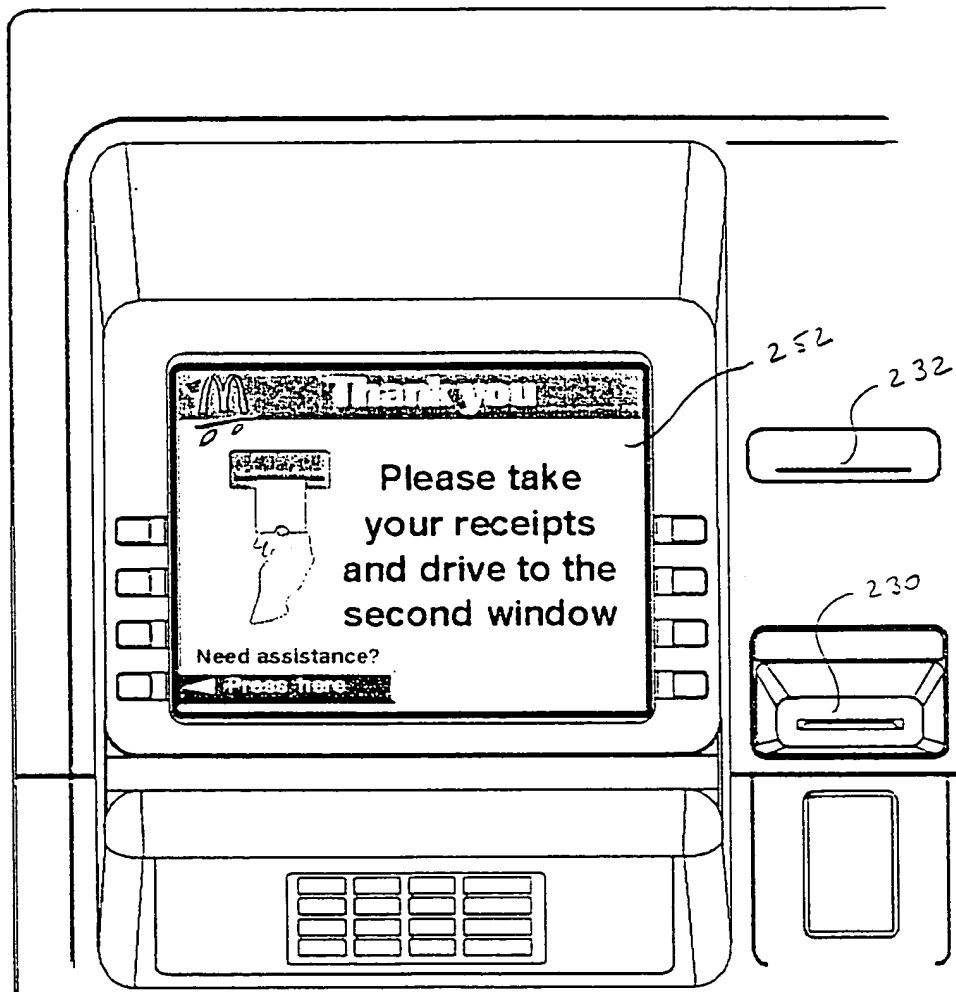

6 - Thank You


FIG 45

 08439718-11200

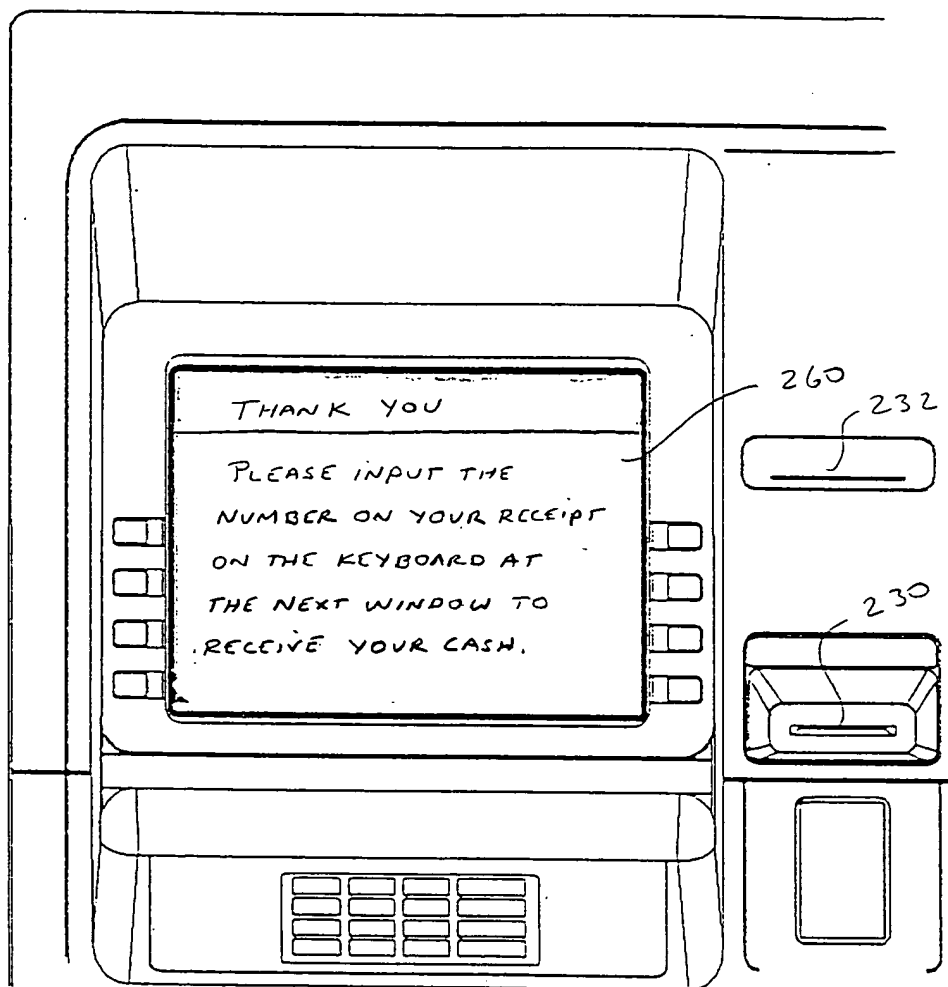


6 - Thank You

 
FIG 46

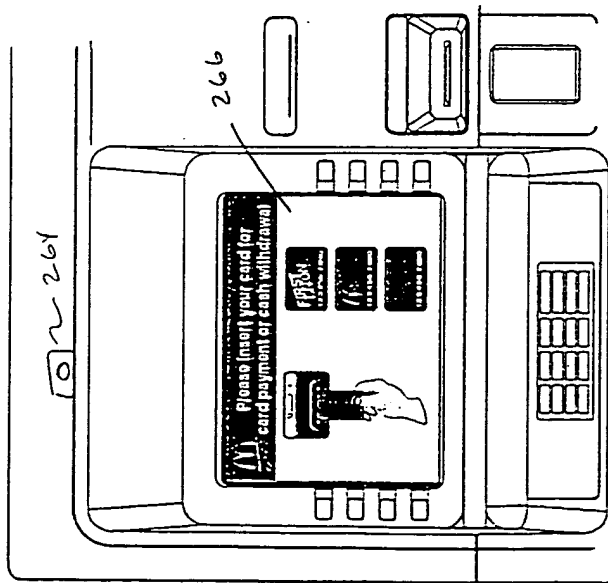


1 - Insert card

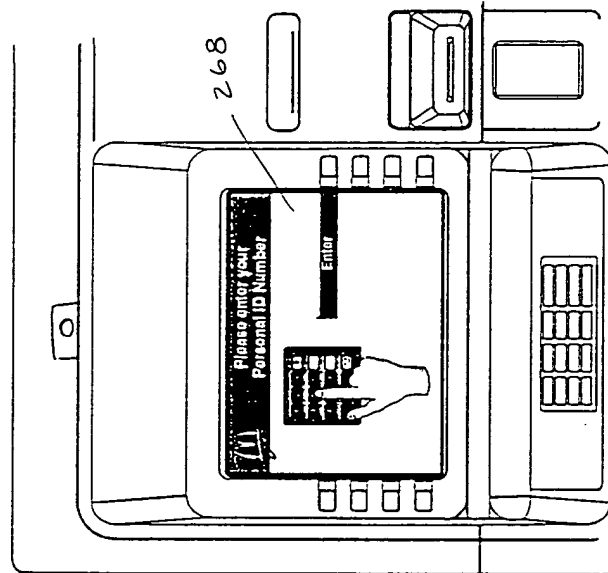 


2 - Enter PIN

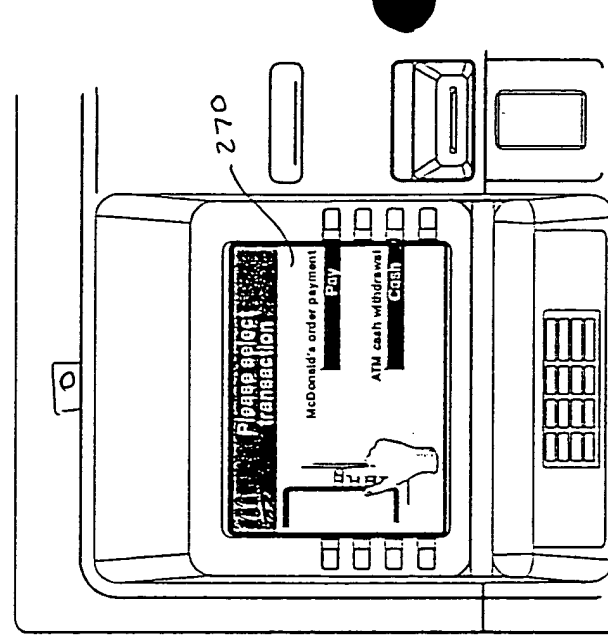 


3 - Select transaction

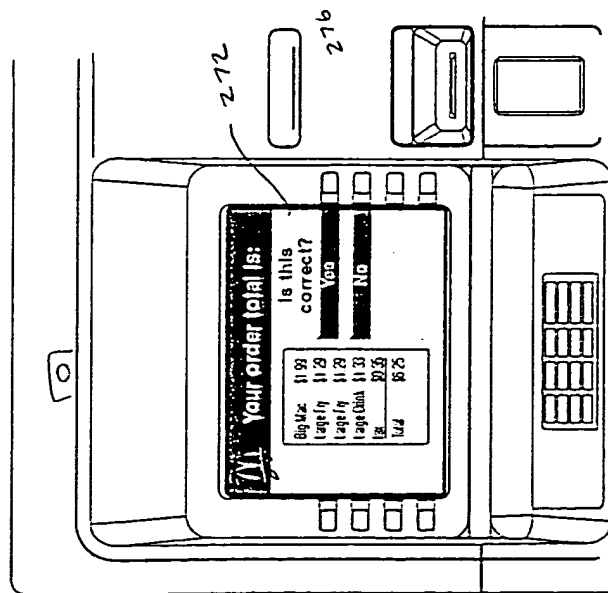 


4 - Order total

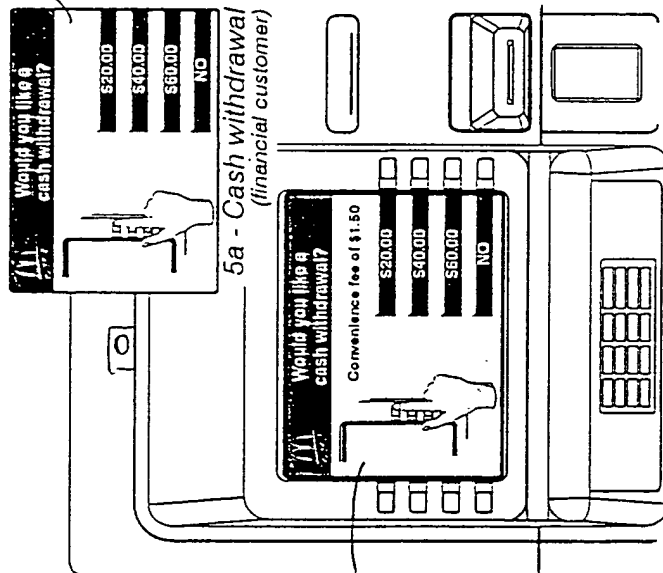 

 5a - Cash withdrawal (financial customer)

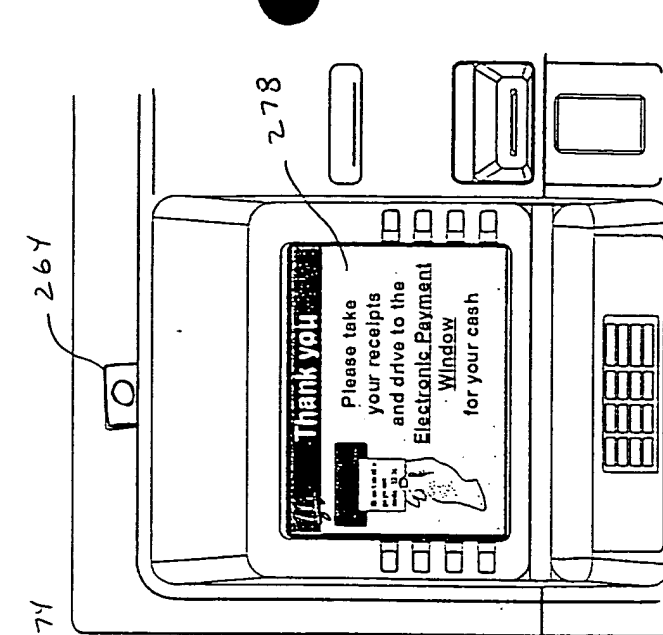

 5b - Cash withdrawal (non-financial customer)

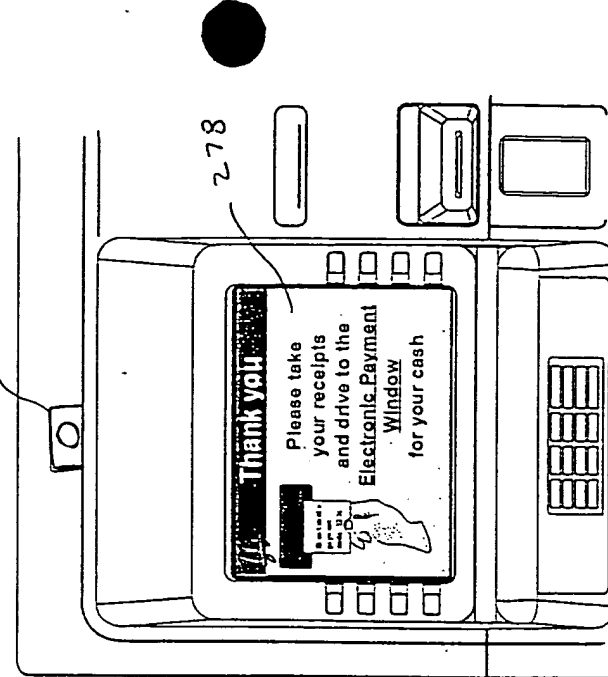

6 - Thank You

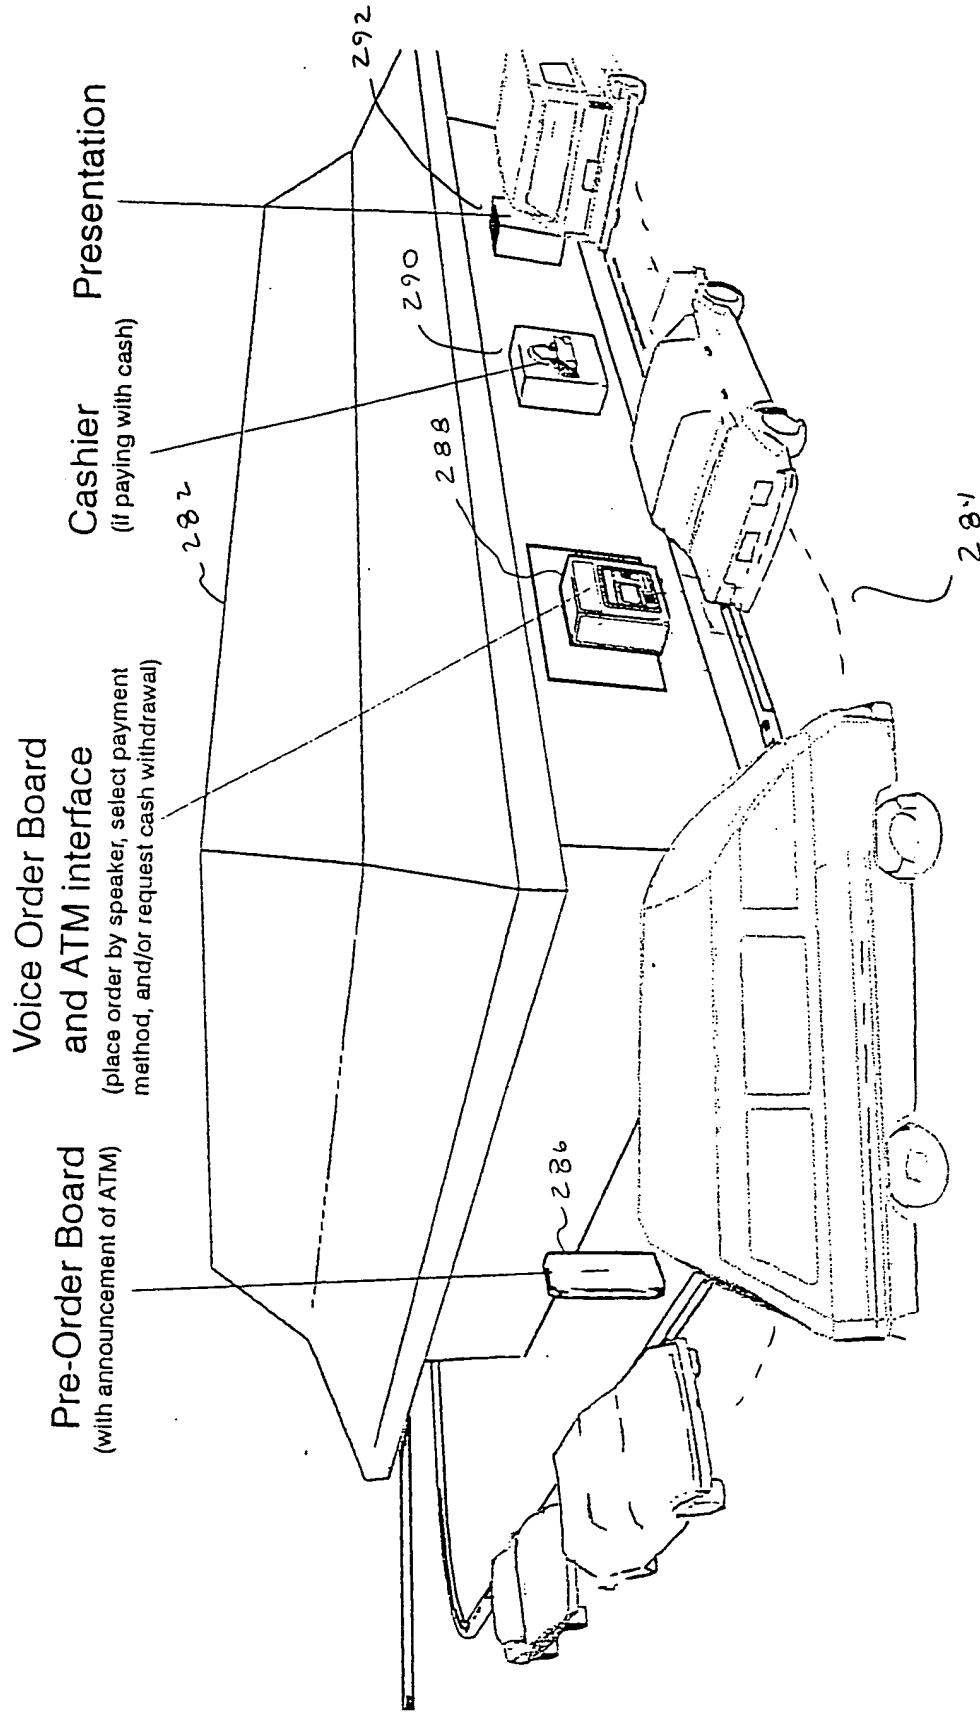 


Fig 48

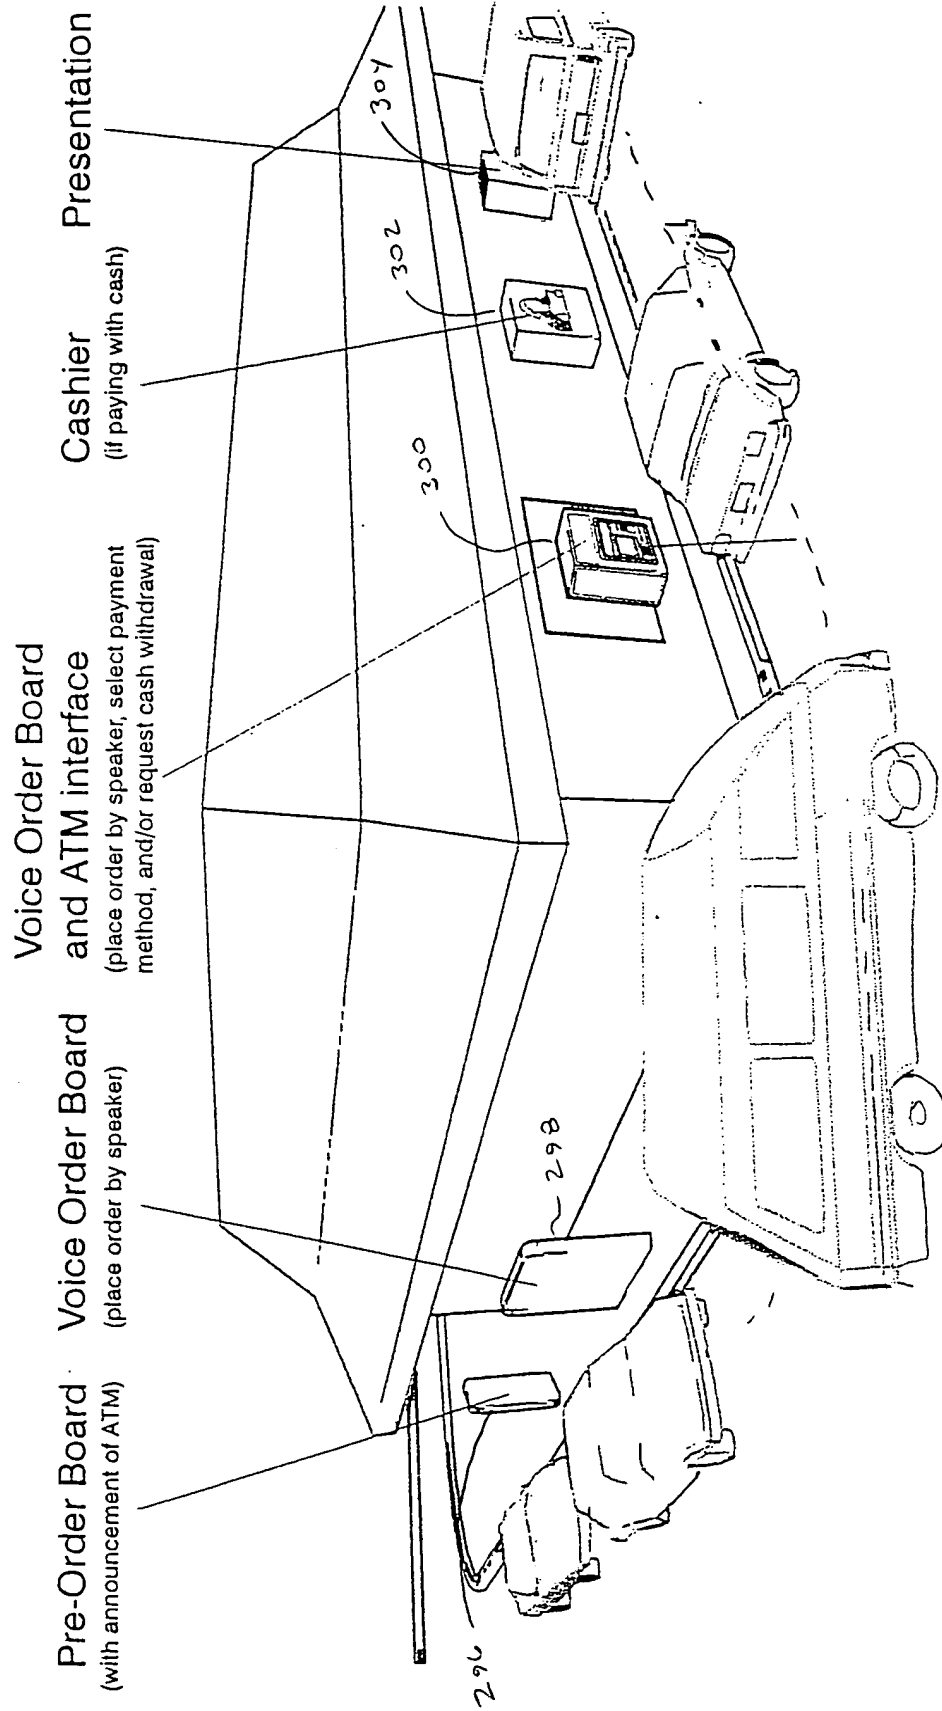 


FIG 49

29-1

66277-8T/66450

 
COD and
Speaker

Menu Board

ATM interface
(select payment method,
and/or request cash withdrawal)

Cashier

Fulfillment

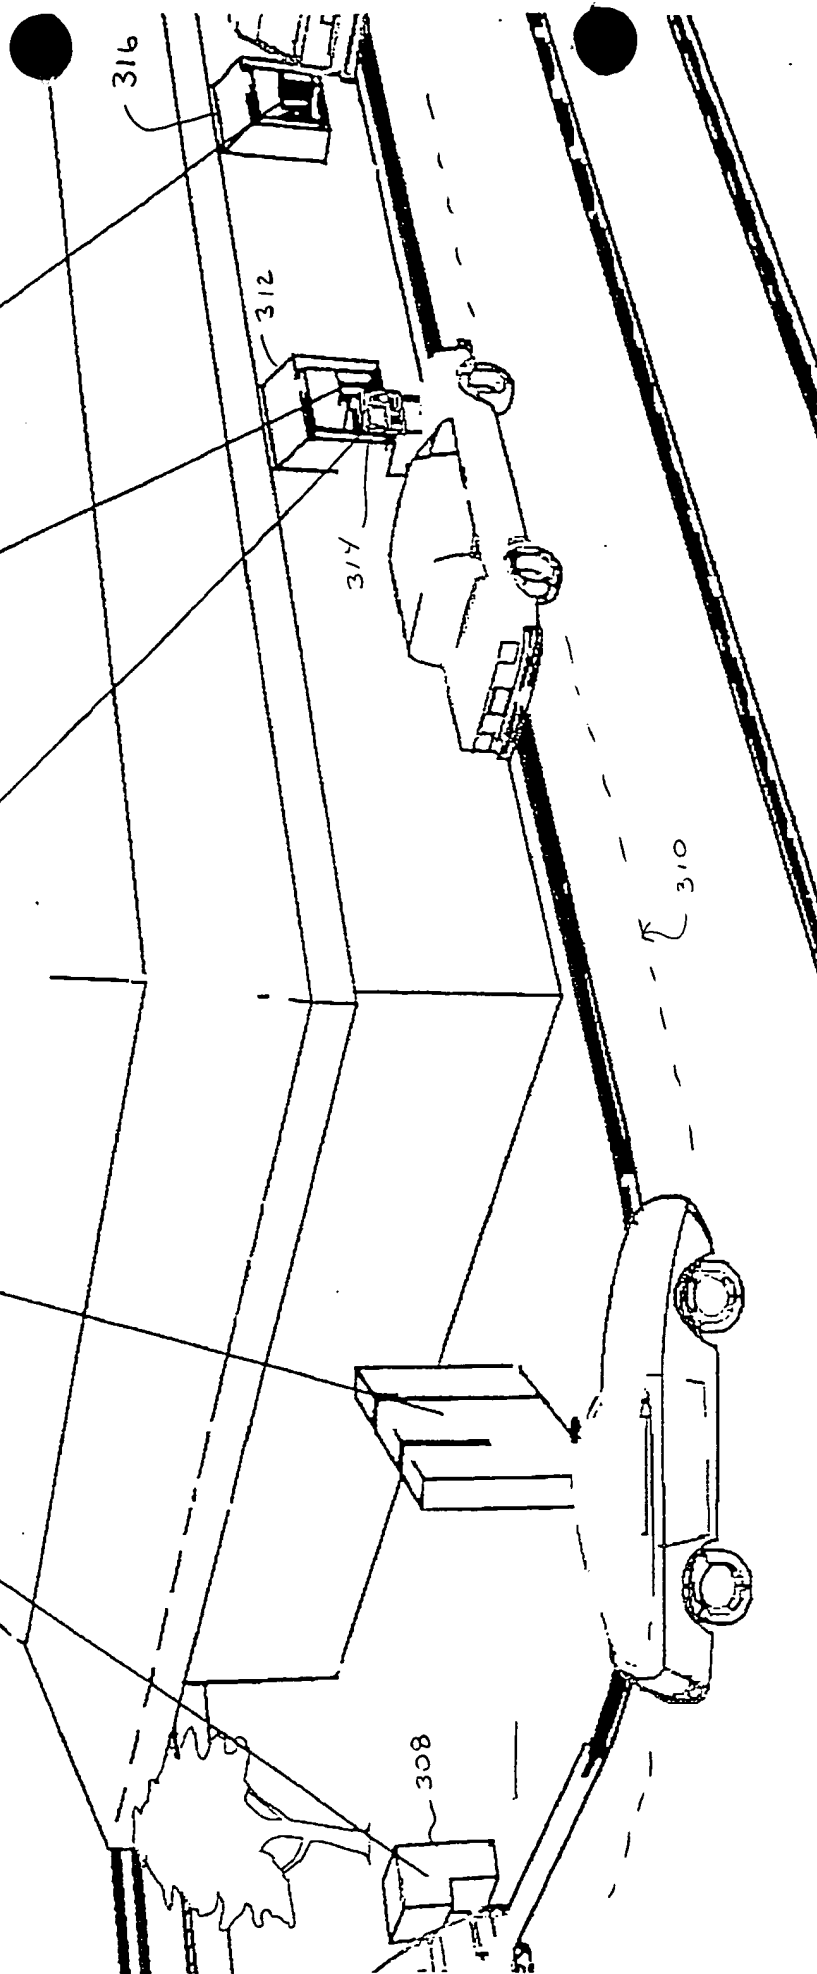

306

FIG 50

COD Menu Board ATM interface
(place order by speaker, select payment
method, and/or request cash withdrawal)

Cashier
(if paying with cash)

Fulfillment

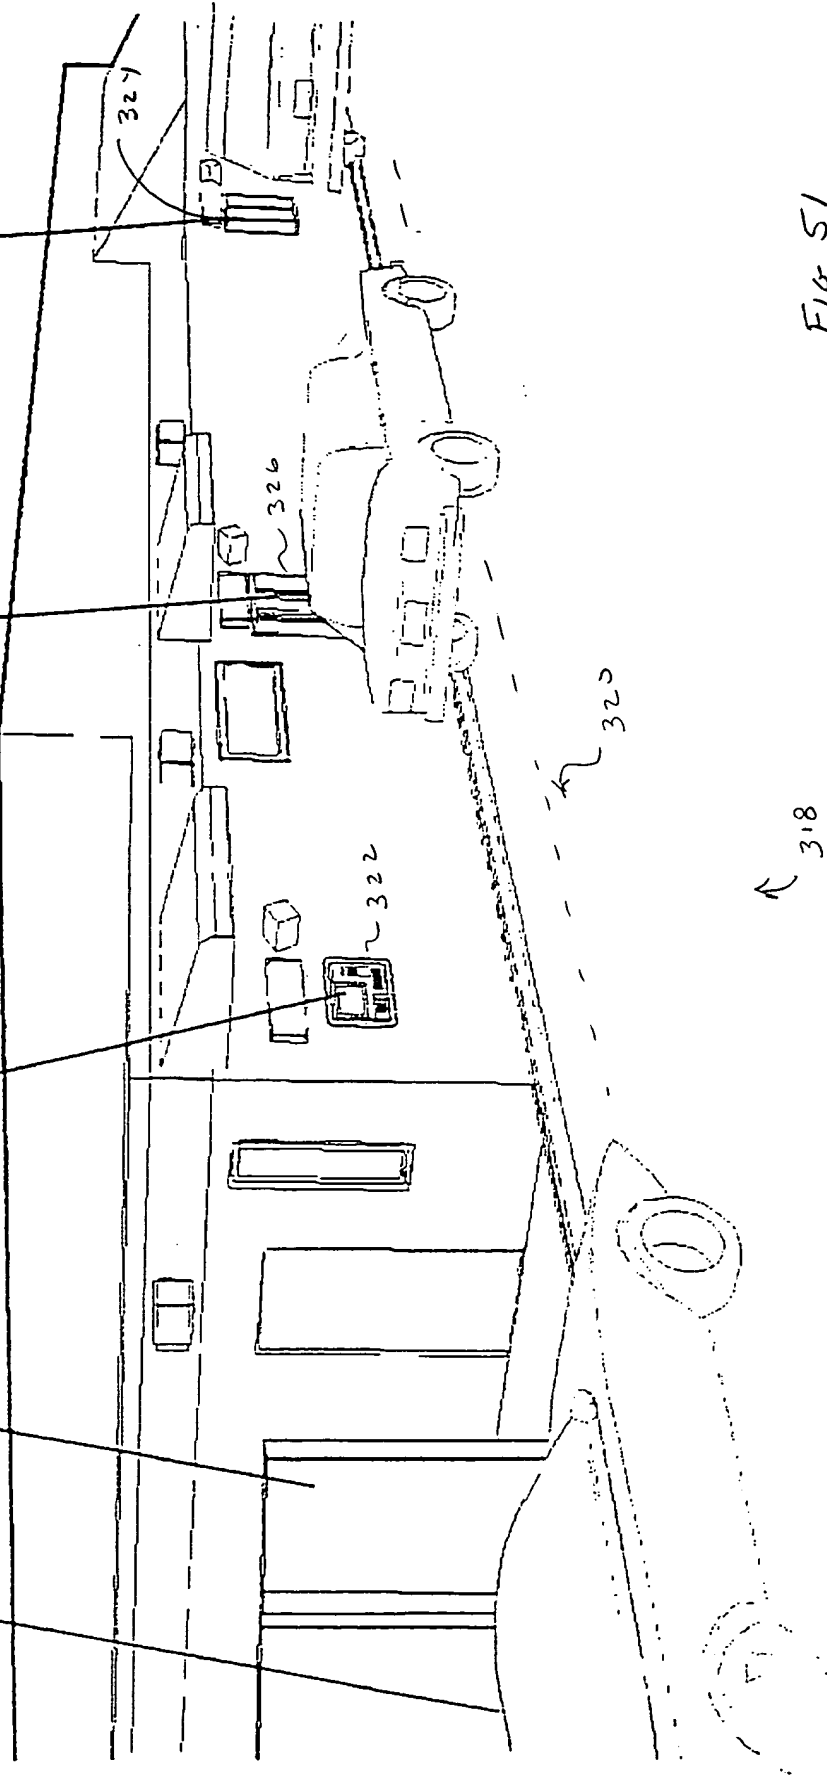 


FIG 51

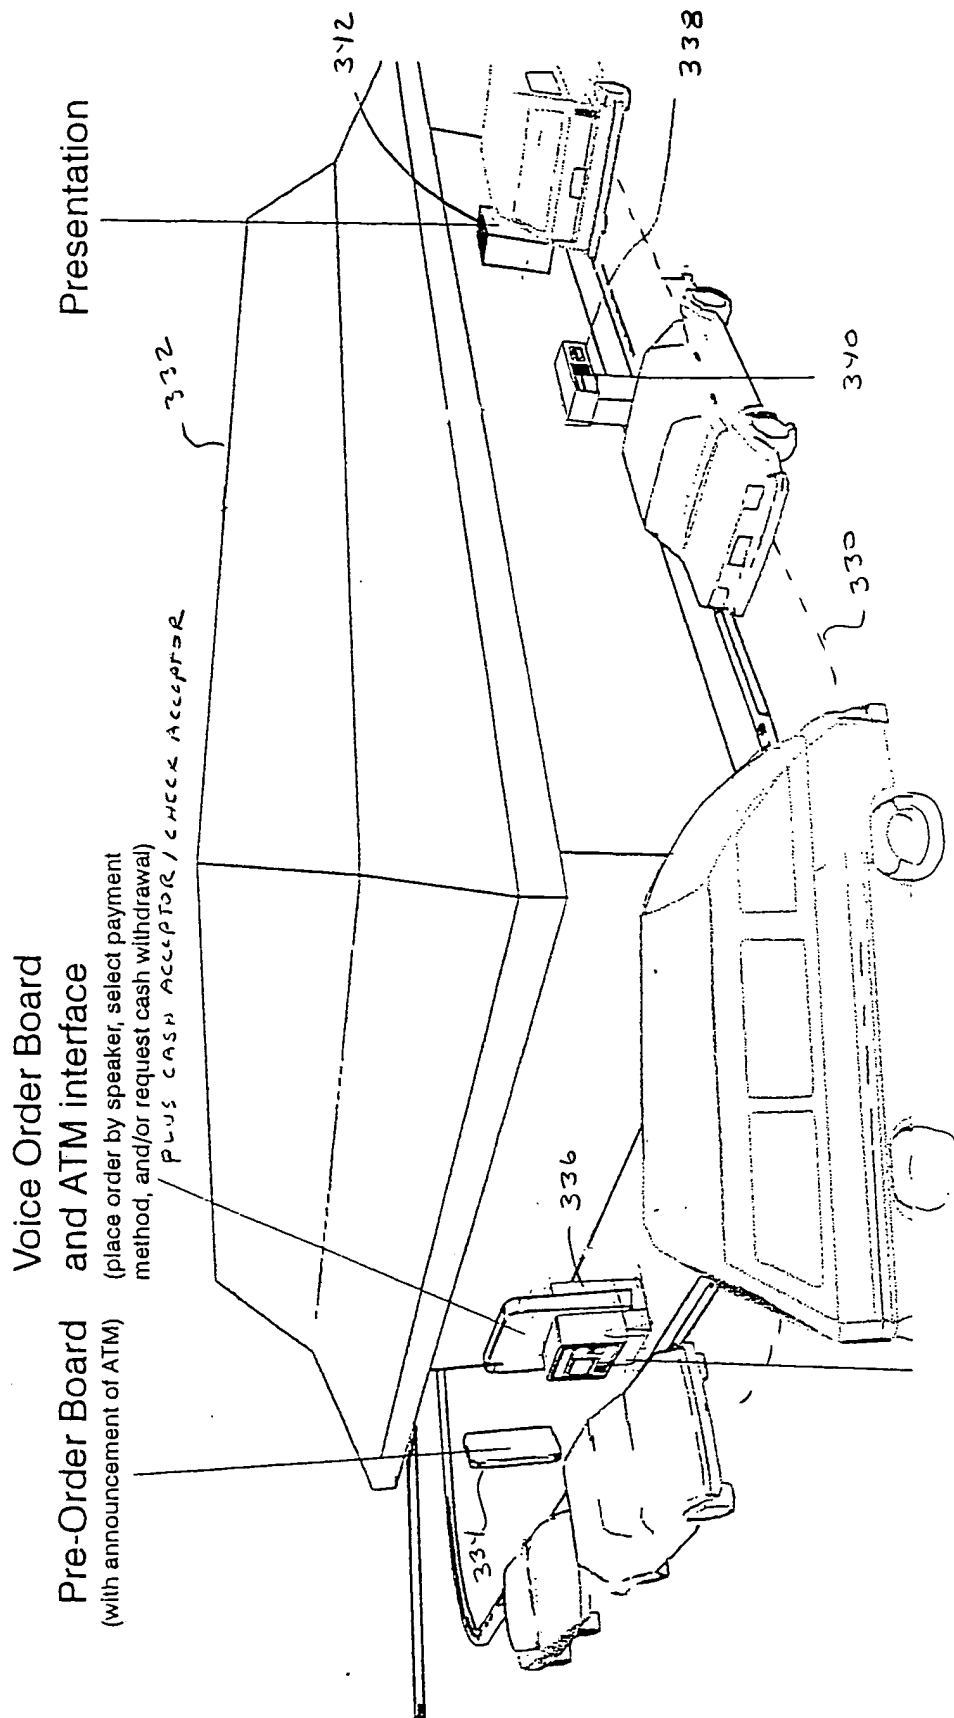 


Fig 52



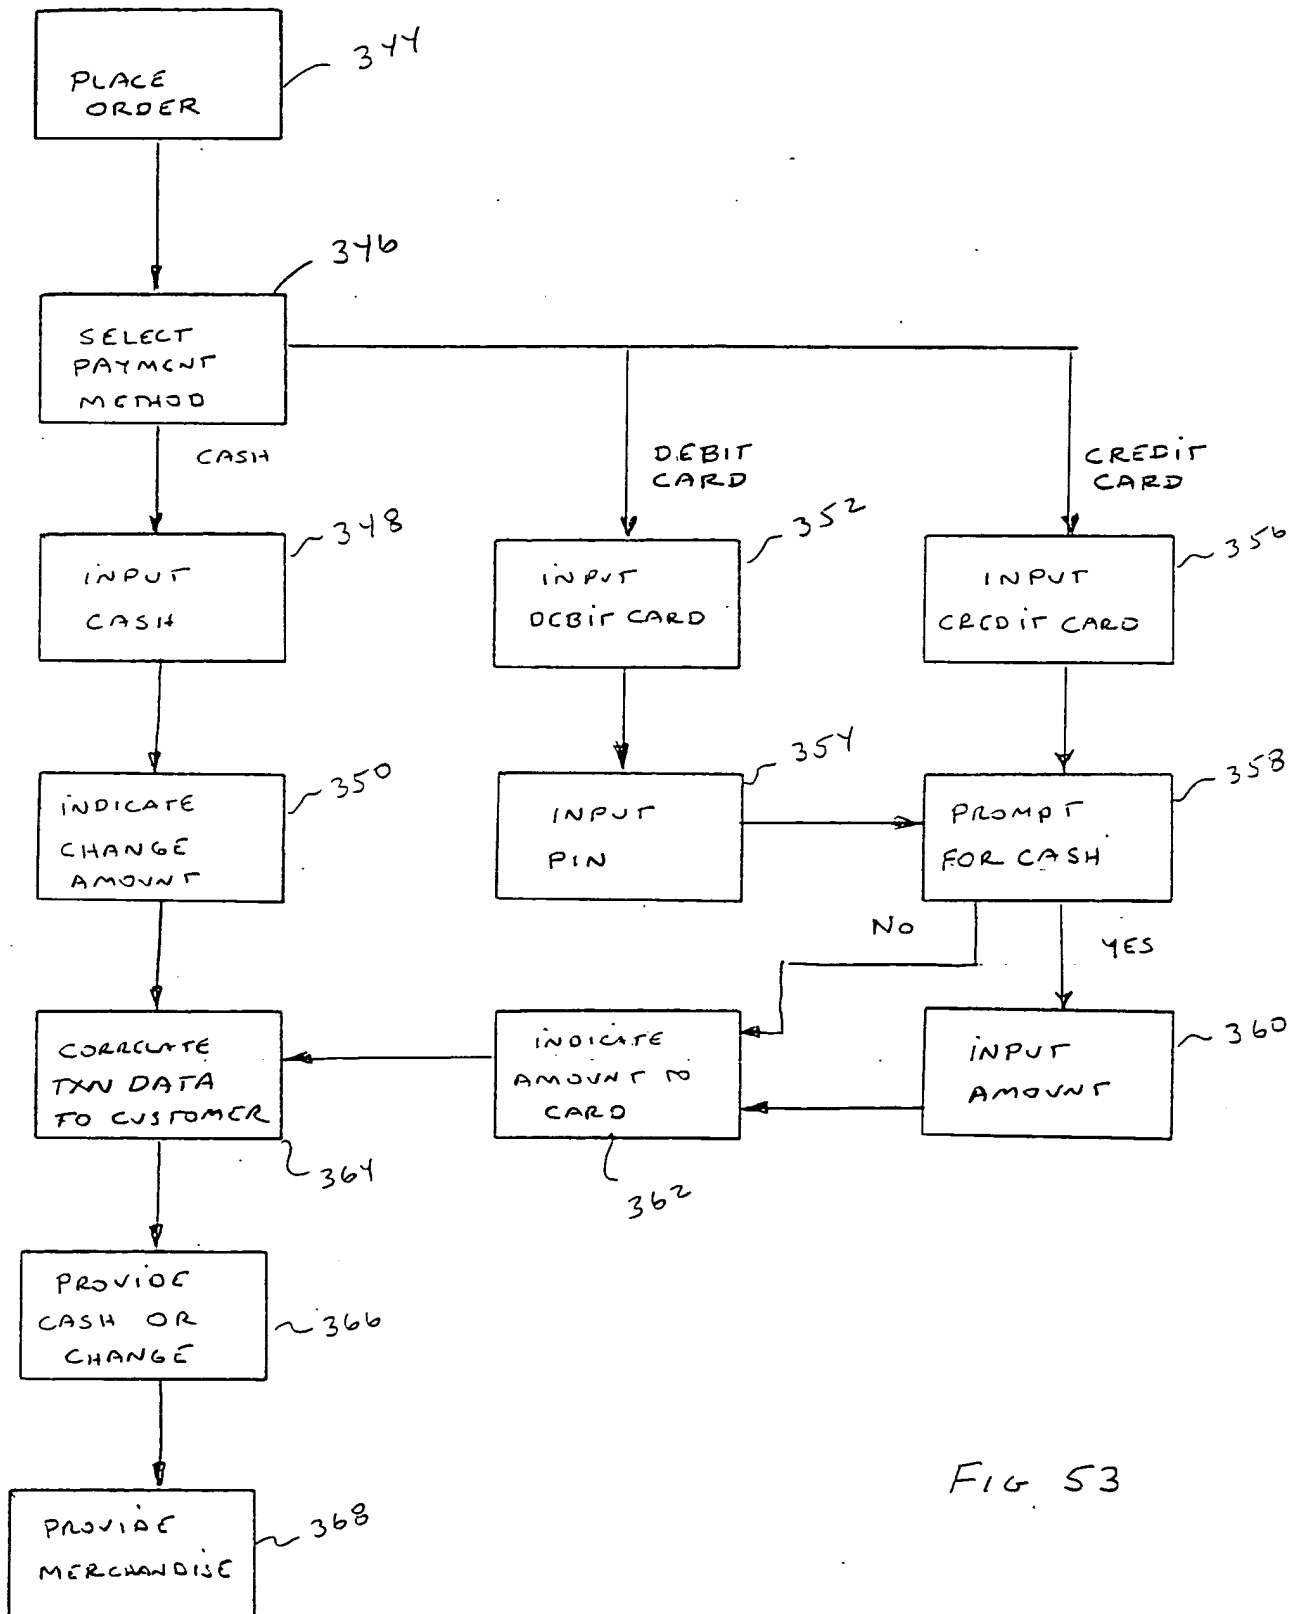 


FIG 53

 FIG 54

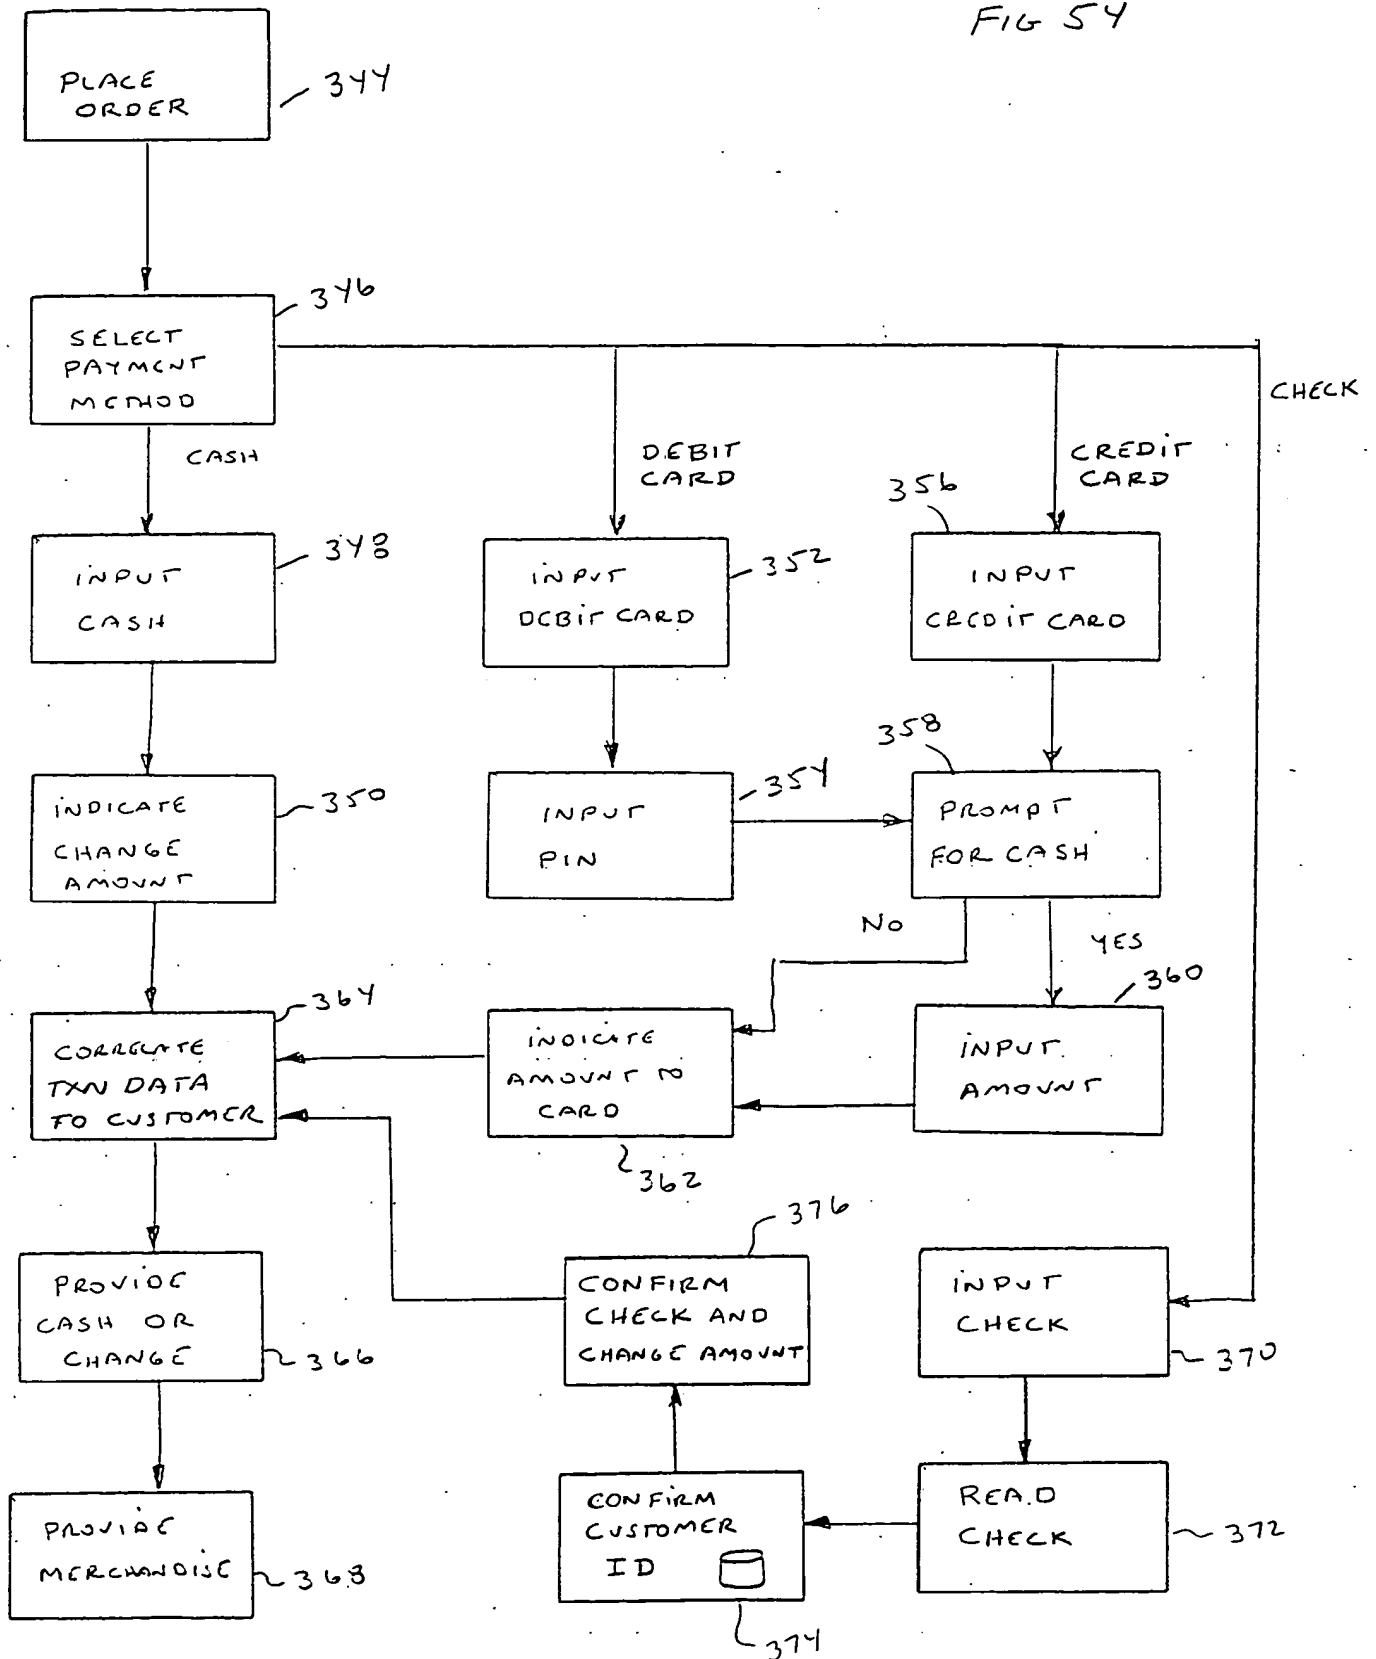

09430710-111200

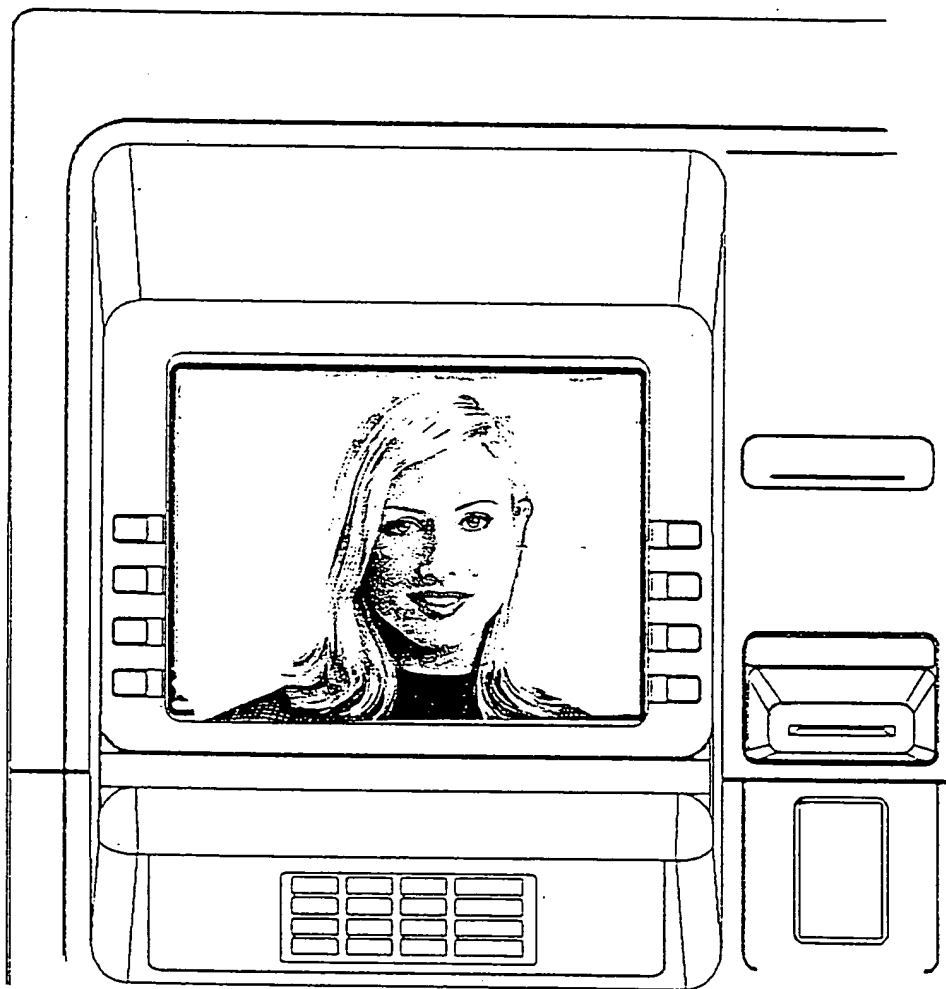 

378 →

Fig 55

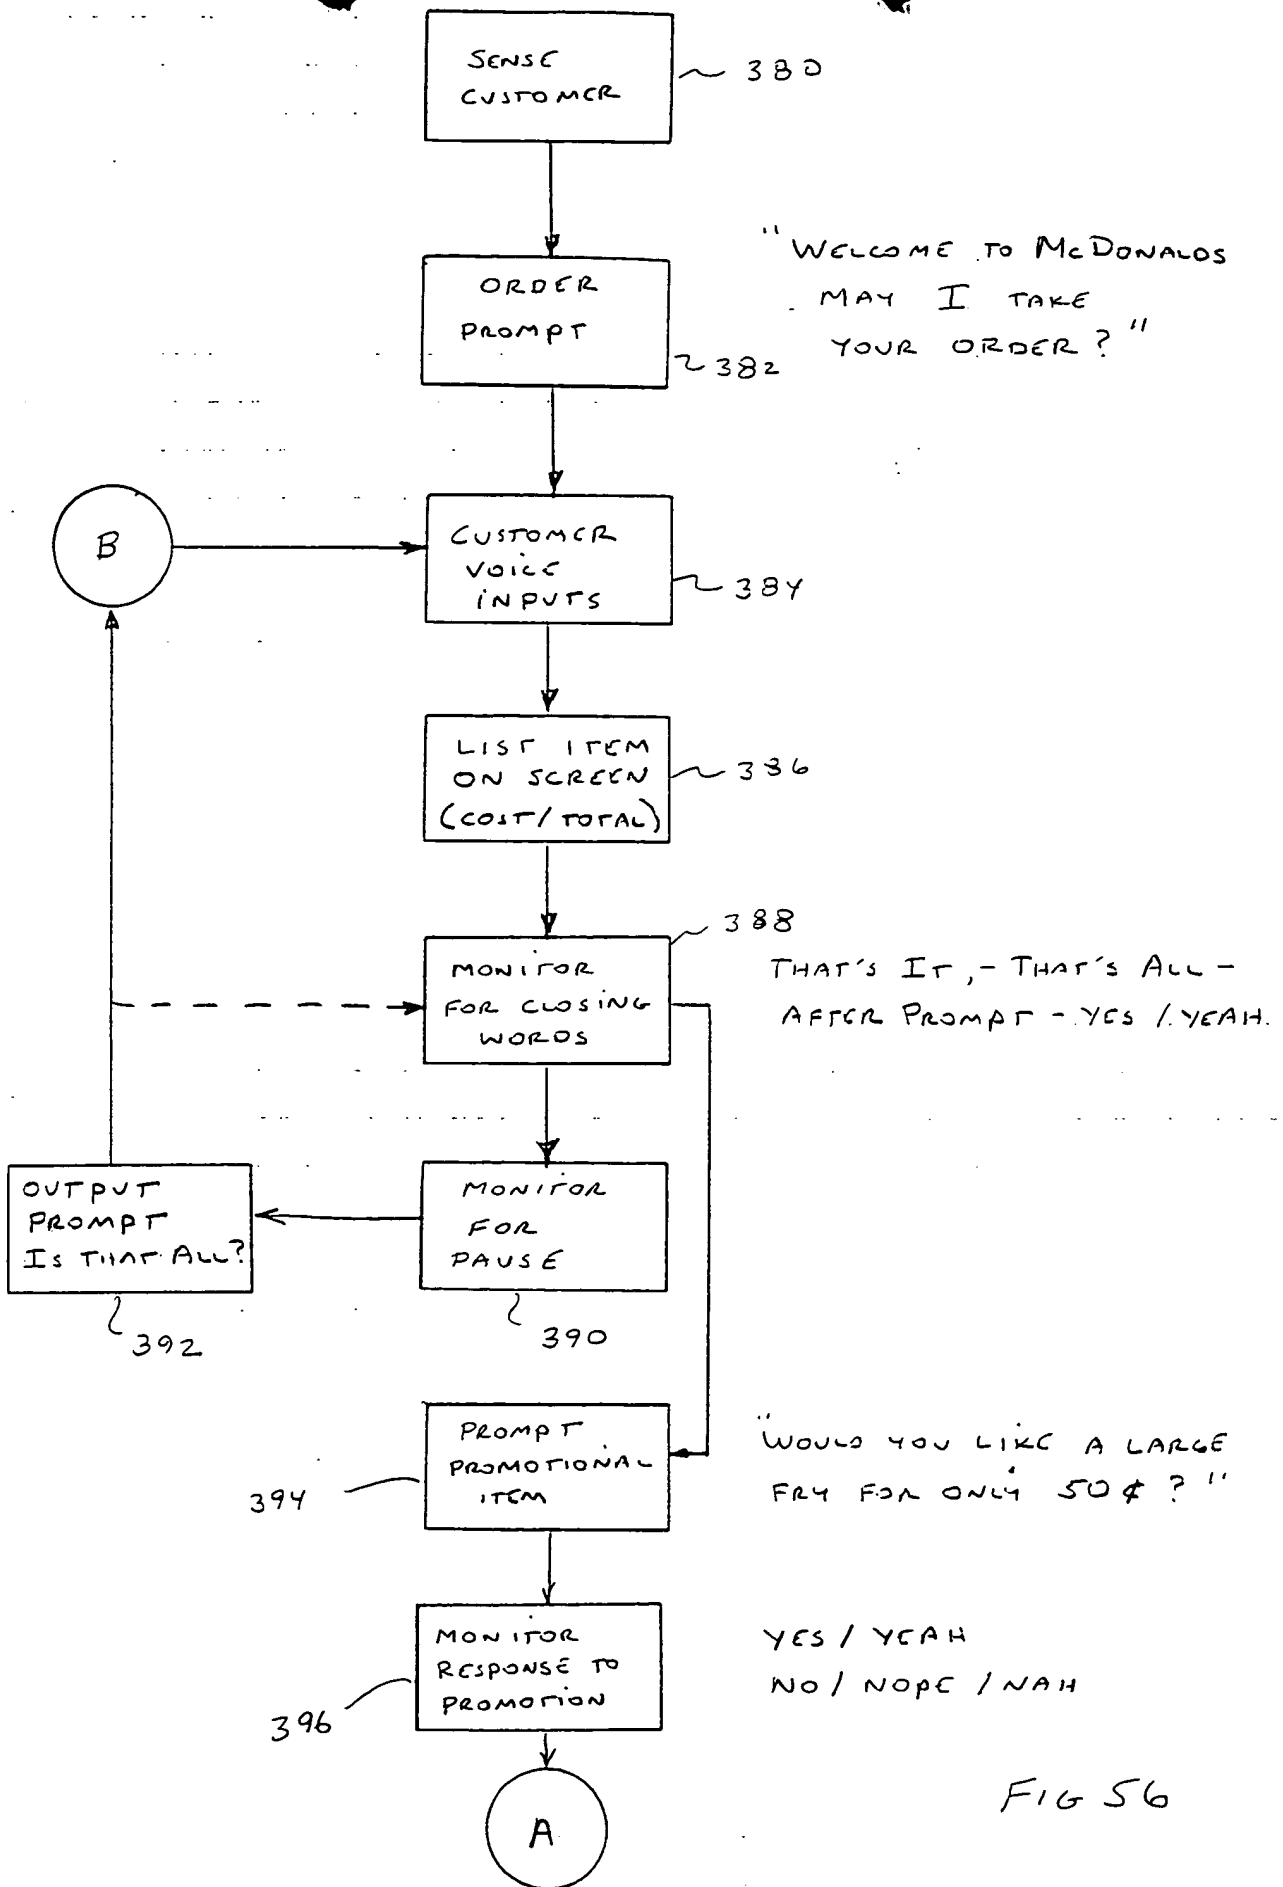 


FIG 56

094330710 1412000

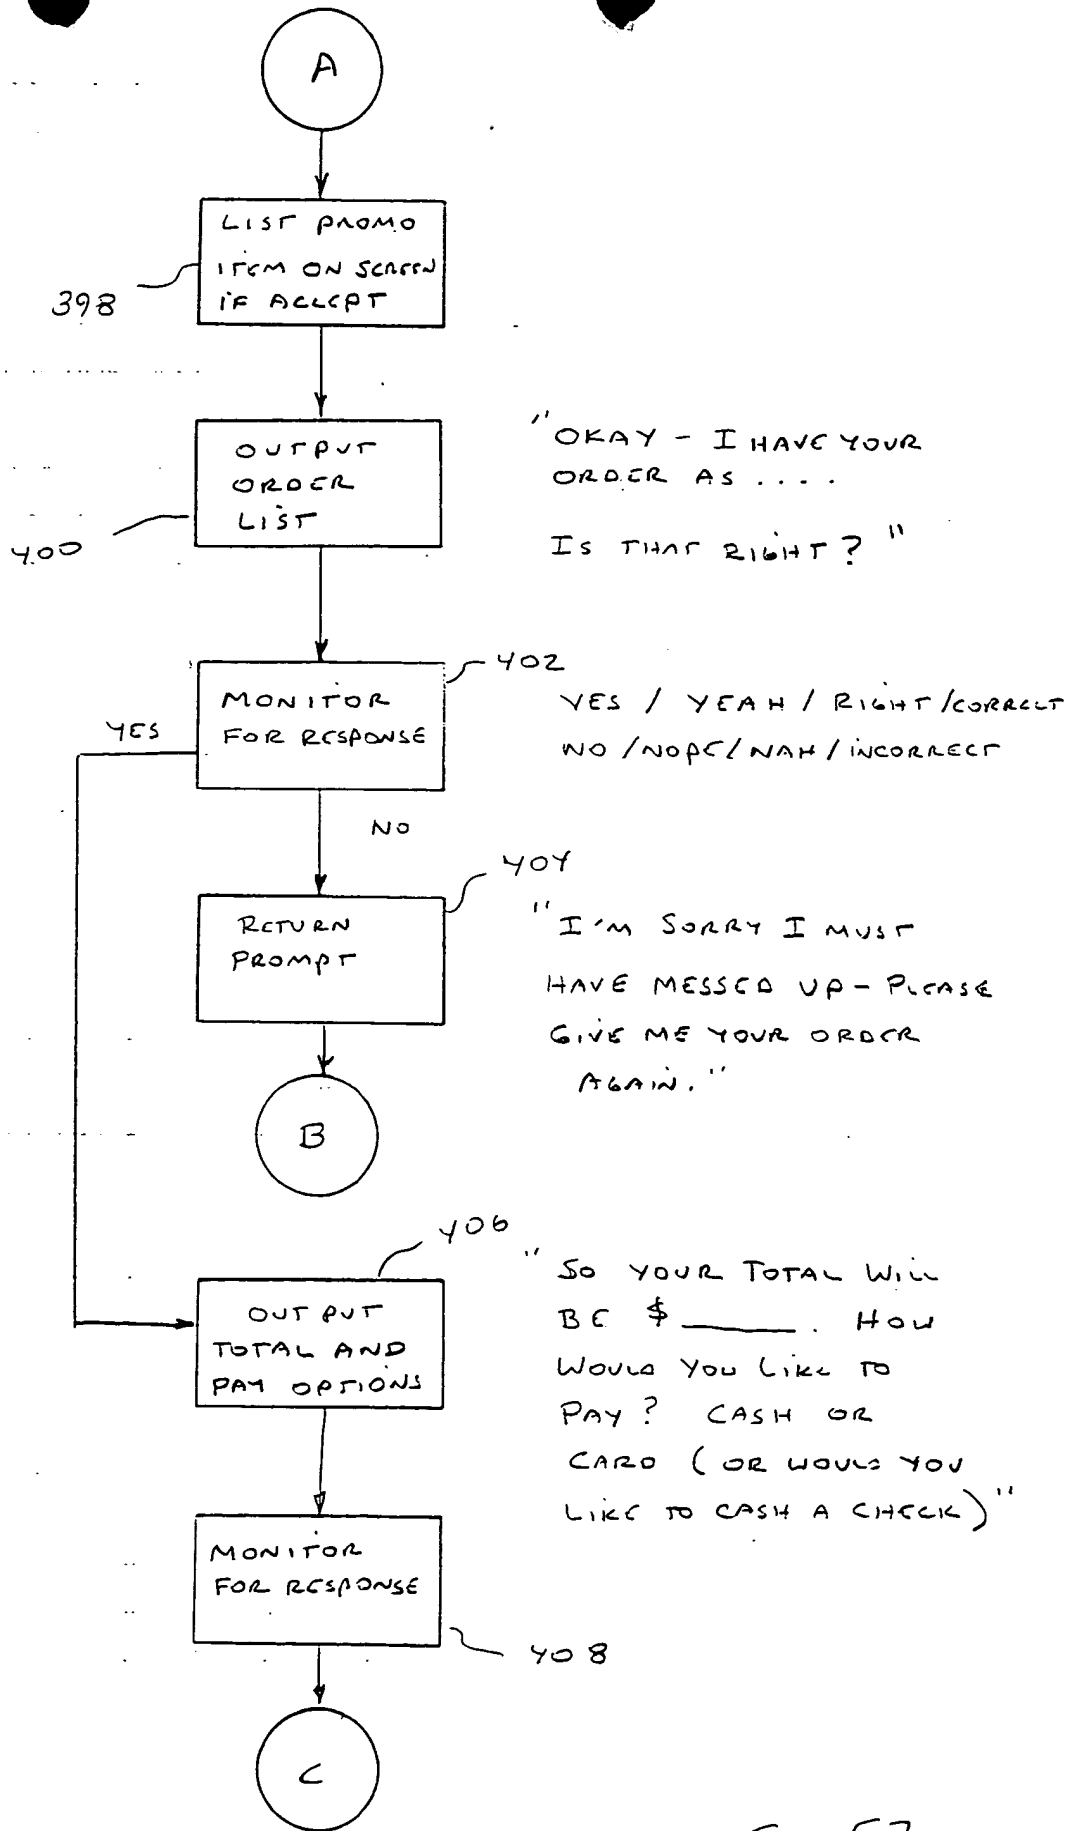 


FIG 57

60639710-44255

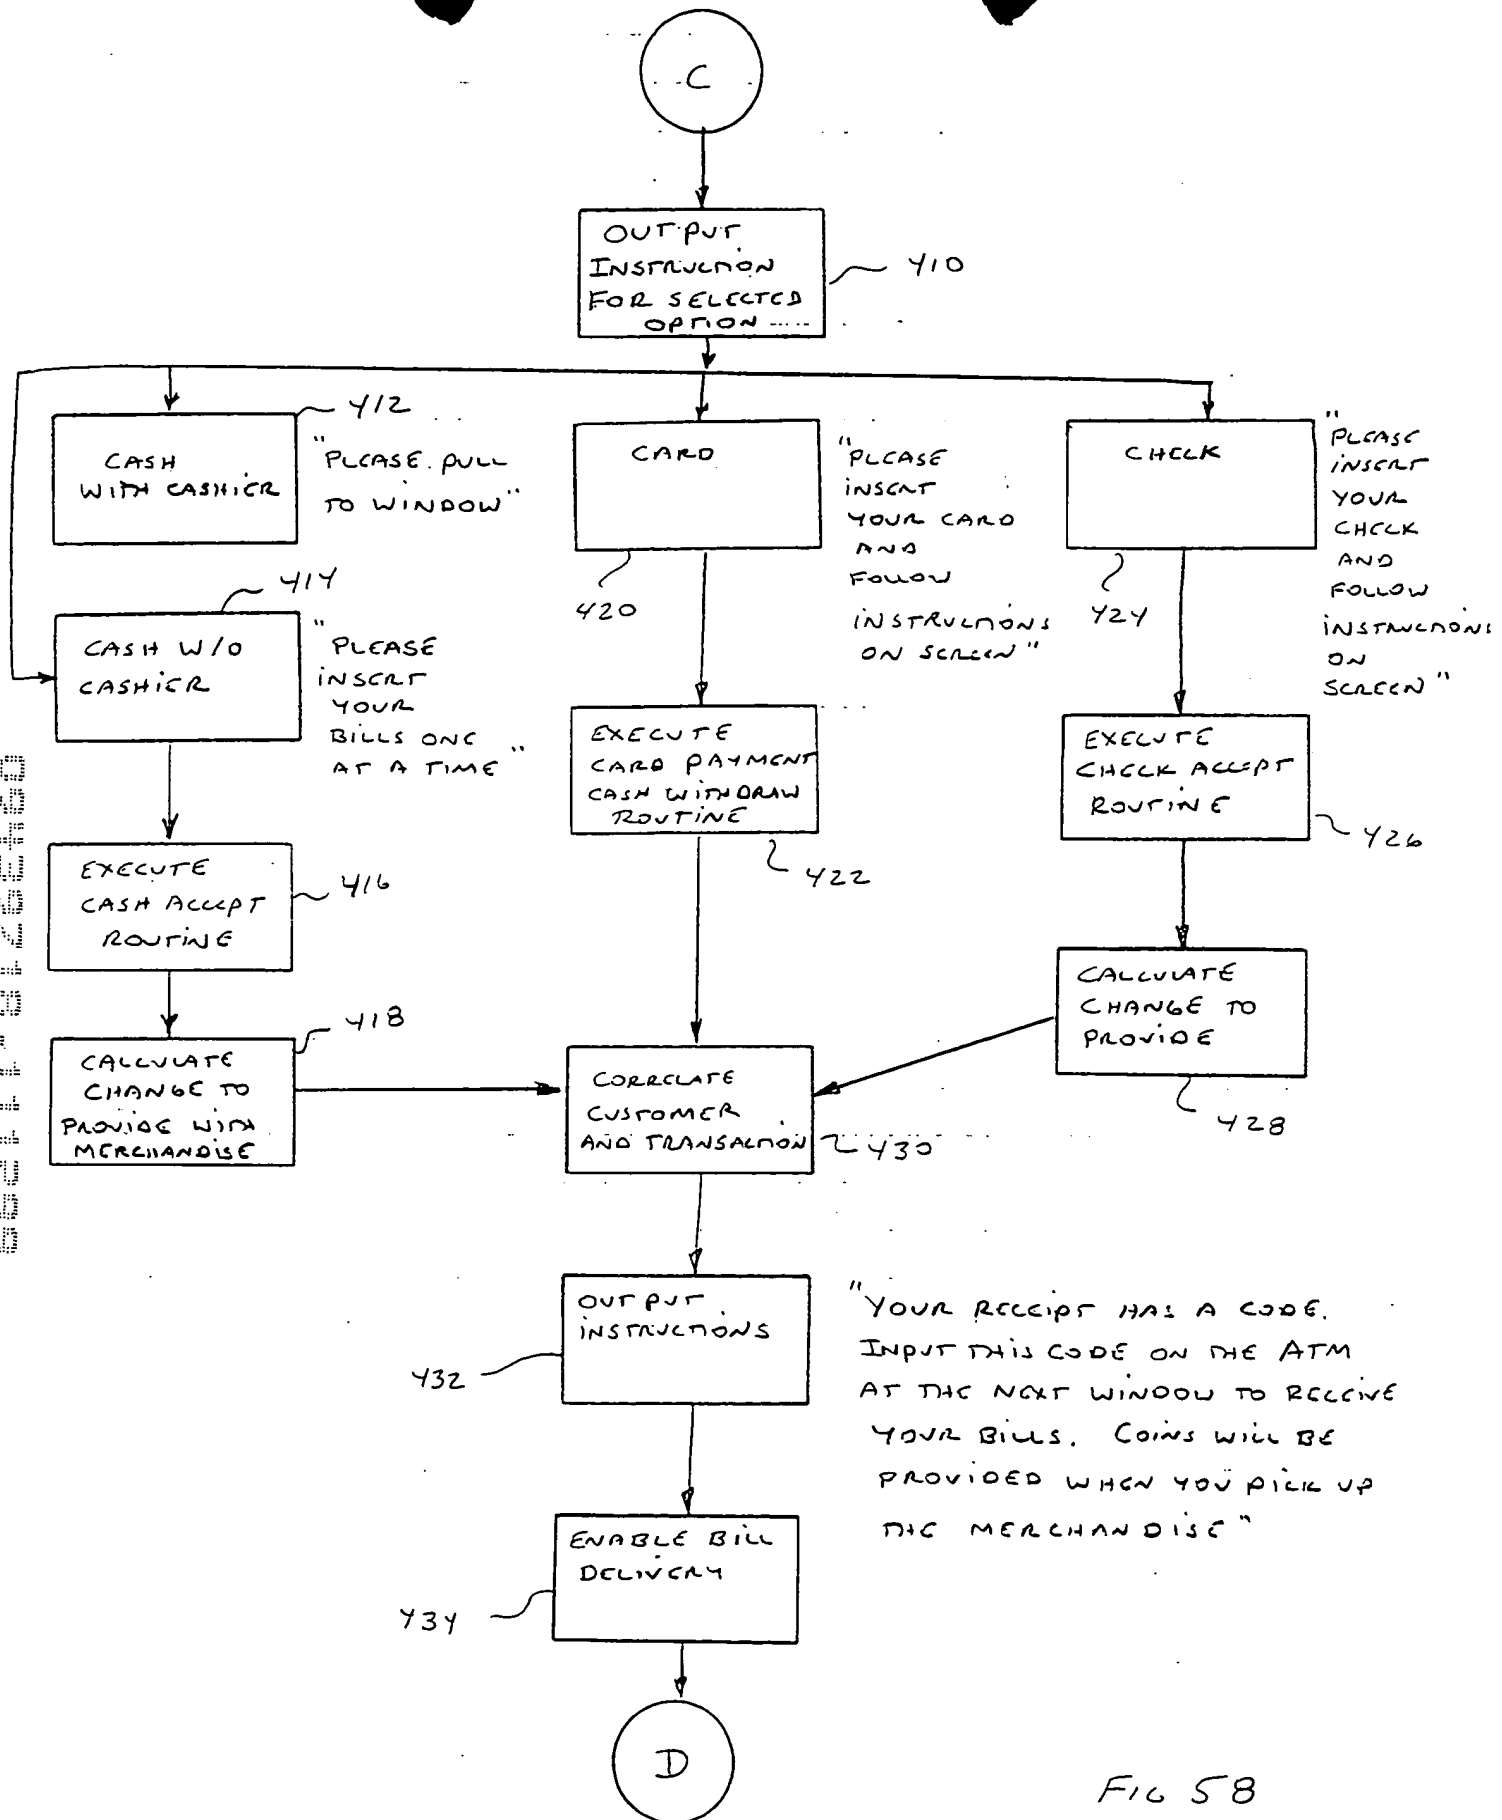 


FIG 58

6622-1-82


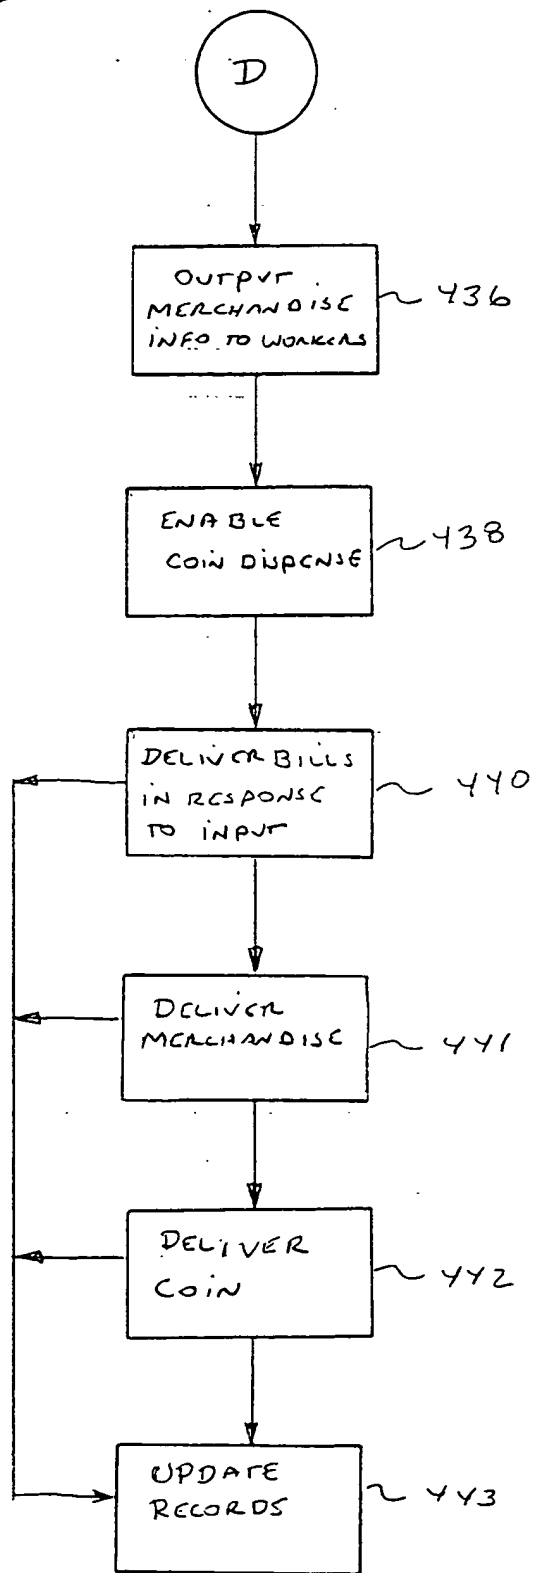 


FIG 59

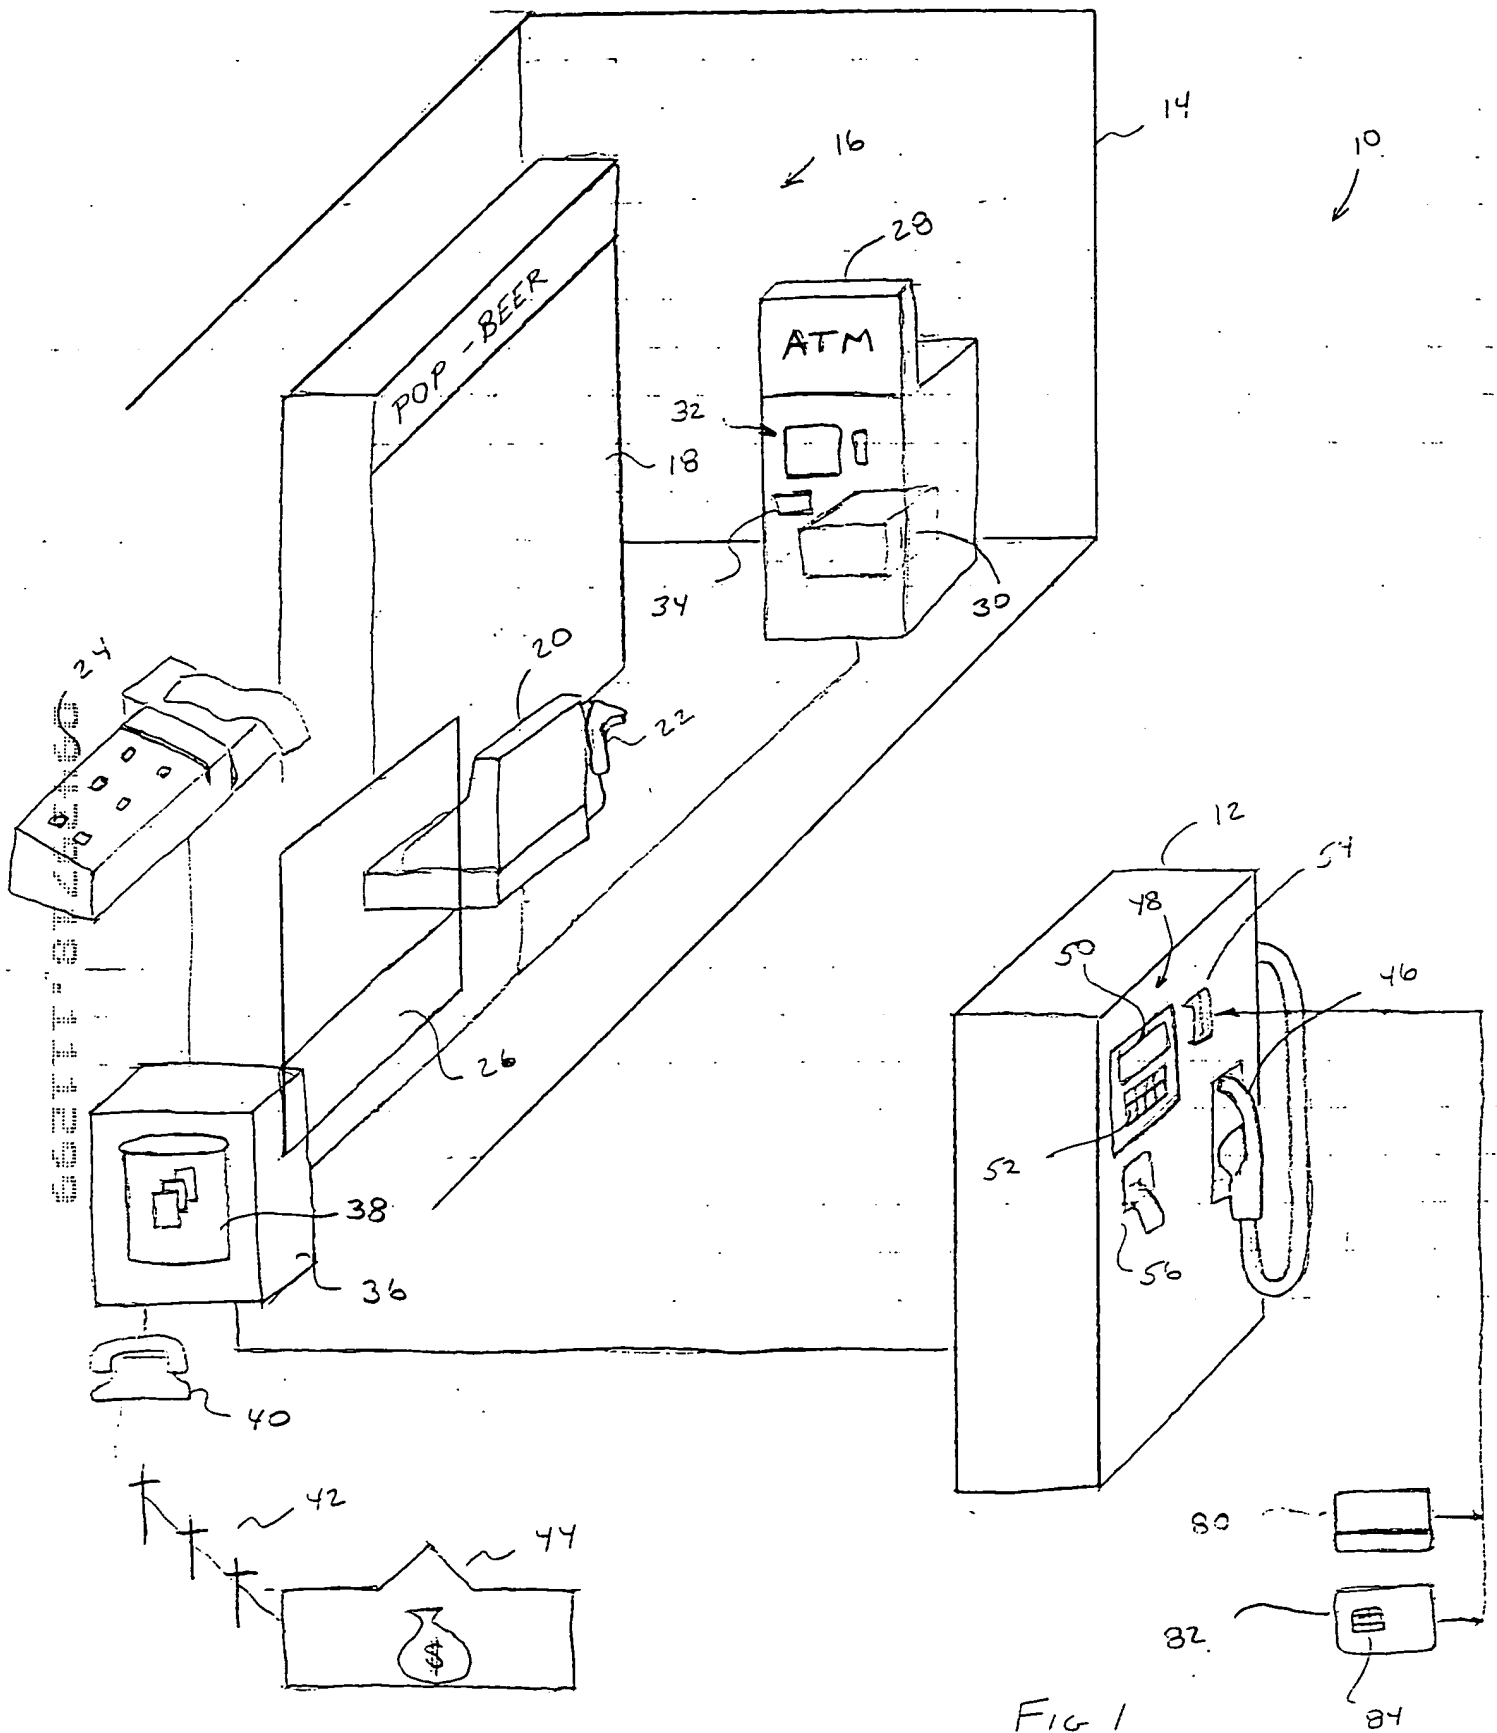 

09/09/10 11:44:00

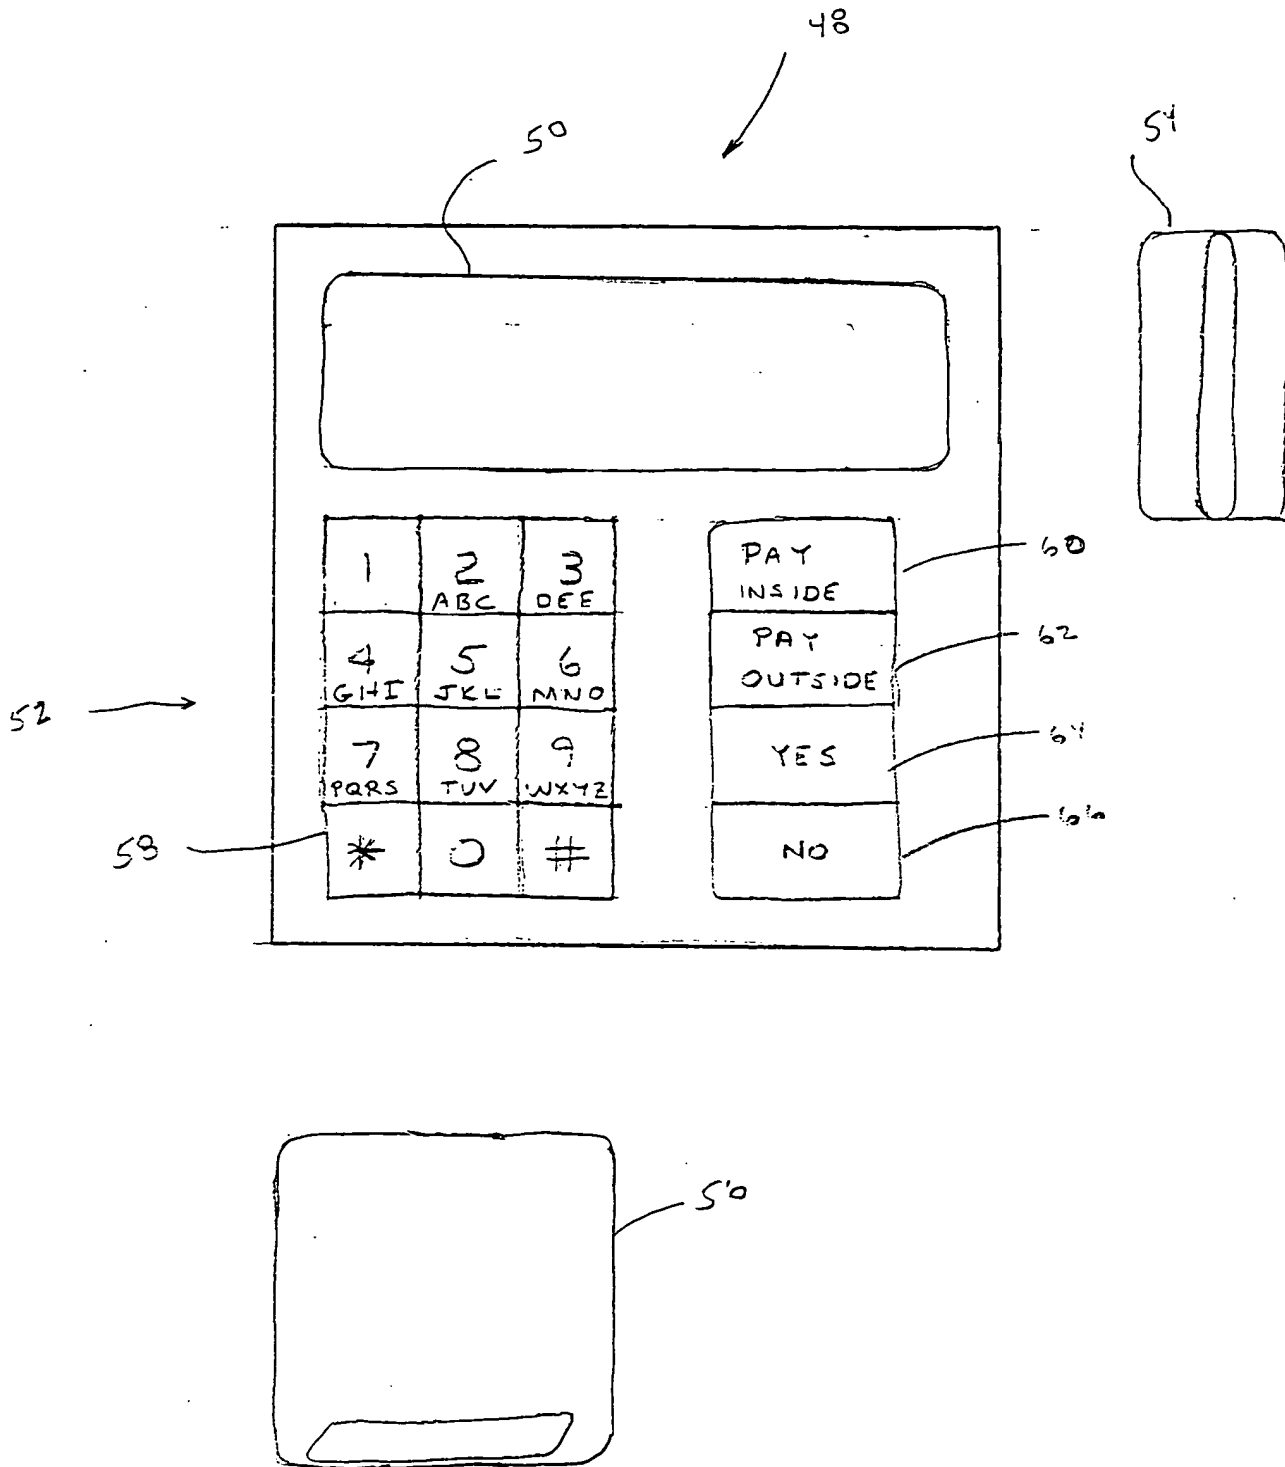 


FIG 2

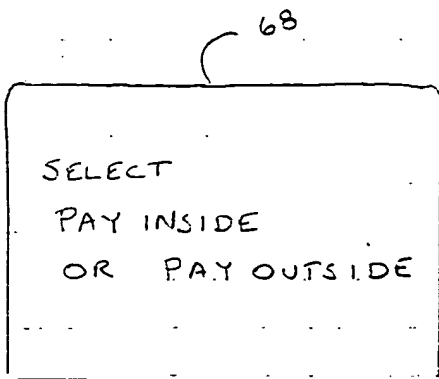 


FIG 3

Action.
- SELECT "PAY INSIDE"

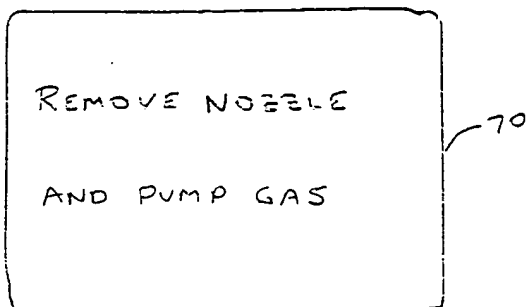 


FIG 4

ACTION
- REMOVE NOZZLE
AND PUMP

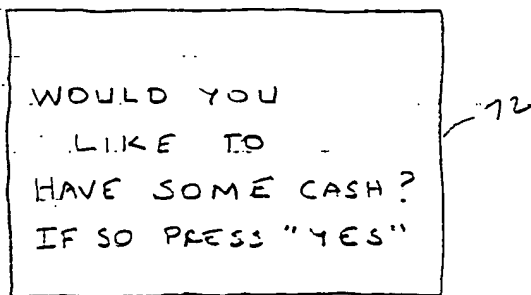 


FIG 5

ACTION
- NO RESPONSE
- REPLACE NOZZLE


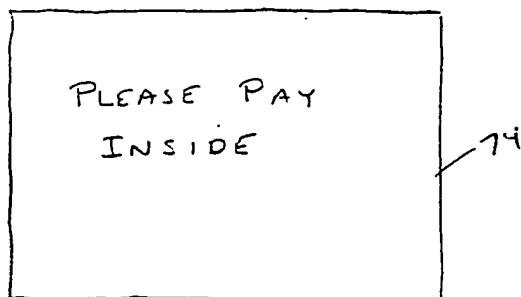 


FIG 6

ACTION
- USER PAYS INSIDE

 
FIG. 7

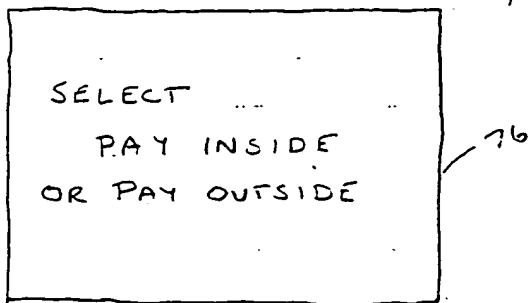

ACTION

- USER SELECTS "PAY OUTSIDE"

 
FIG. 8

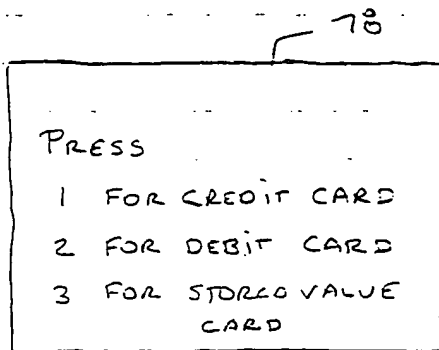

ACTION

- USER SELECTS INPUT
FOR EXAMPLE "1" FOR
CREDIT CARD

 
FIG. 9

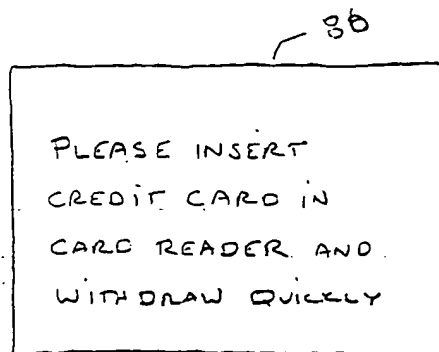

ACTION

- USER INSERTS CARD
AND WITHDRAWS CARD

 FIG. 10

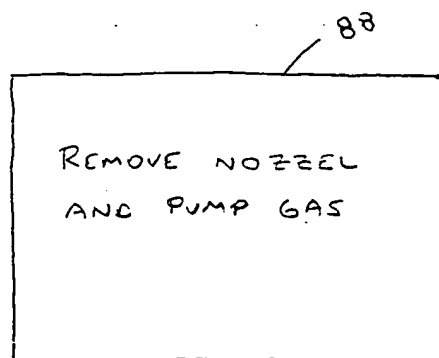

ACTION

- REMOVE NOZZEL AND PUMP

98

WOULD YOU
LIKE TO
HAVE SOME CASH?
IF SO, PRESS "YES"

Fig 11

ACTION

- NO RESPONSE
- REPLACE NOZZLE

100

WOULD YOU LIKE
A RECEIPT?
PRESS
"YES" OR "NO"

Fig 12

ACTION

- USER PRESSES SELECTED KEY
EXAMPLE "YES"

102

RECEIPT IS NOW
PRINTING

Fig 13

ACTION

- PRINTER PRINTS RECEIPT

104

THANK YOU
PLEASE TAKE RECEIPT

Fig 14

ACTION

- USER TAKES RECEIPT

0039710141259